

Aircraft Operating Instructions

BRISTELL LSA



BRM AERO, s.r.o.

LETECKÁ 255

686 04 KUNOVIC

CZECH REPUBLIC

Phone: +420 773 984 338

E-mail: info@brmaero.com

www.brmaero.com



Aircraft Operating Instructions

BRISTELL LSA

Registration: **N437BL**

Serial Number: **437/2019**

**This airplane must be operated in compliance with
information and limitations contained in herein.
This AOI must be available on board of the airplane.**



Aircraft Operating Instructions

INTENTIONALLY LEFT BLANK

Aircraft Operating Instructions

SECTION 0

0 Technical Information

0.1 Record of revisions

0.2 List of effective pages

0.3 Table of contents

Aircraft Operating Instructions

0.1 Record of revisions

Any revision of the present manual (except actual weighing data, cockpit description and list of instruments and avionics) must be recorded in the following table.

Revision No.	Affected Section	Affected Pages	Date of Issue	Approved by	Date of approval	Date inserted	Sign.
-	ALL	ALL, Initial	07/2017	Petr Javorský	07/2017	07/2017	P. Javorský
1	0 2 4 5 7 9	i, ii 0-2, 0-3, 0-4 2-3, 2-10 4-11 5-3, 5-4, 5-7, 5-8, 5-9, 5-10 7-6 9-2, 9-3, 9-4, 9-5, 9-6	07/2017	Petr Javorský	07/2017	07/2017	P. Javorský
2	0 1 3 4 5	0-2 to 0-8 1-1, 1-2, 1-8 3-1, 3-2, 3-7, 3-8, 3-10 to 3-20 4-1, 4-10 to 4-16 5-7	07/2017	Petr Javorský	07/2017	07/2017	P. Javorský
3	ALL	BRISTELL S-LSA renamed to BRISTELL LSA	07/2017	Petr Javorský	07/2017	07/2017	P. Javorský
4	0 2 6	Safety Directive ALL-SA-0-0-0-0001-2020 0-2 to 0-5 2-9 6-3 to 6-7, 6-10 to 6-14	09/2020	Petr Javorský	09/2020	09/2020	P. Javorský

Aircraft Operating Instructions

0.2 List of effective pages

Section	Page	Rev.	Date of Issue	Section	Page	Rev.	Date of Issue
	i	3	07/2017	2	2-1	3	07/2017
	ii	3	07/2017		2-2	3	07/2017
					2-3	3	07/2017
0	0-1	3	07/2017		2-4	3	07/2017
	0-2	4	09/2020		2-5	3	07/2017
	0-3	4	09/2020		2-6	3	07/2017
	0-4	4	09/2020		2-7	3	07/2017
	0-5	4	09/2020		2-8	3	07/2017
	0-6	3	07/2017		2-9	4	09/2020
	0-7	3	07/2017		2-10	3	07/2017
	0-8	3	07/2017				
1	1-1	3	07/2017	3	3-1	3	07/2017
	1-2	3	07/2017		3-2	3	07/2017
	1-3	3	07/2017		3-3	3	07/2017
	1-4	3	07/2017		3-4	3	07/2017
	1-5	3	07/2017		3-5	3	07/2017
	1-6	3	07/2017		3-6	3	07/2017
	1-7	3	07/2017		3-7	3	07/2017
	1-8	3	07/2017		3-8	3	07/2017
					3-9	3	07/2017
					3-10	3	07/2017
					3-11	3	07/2017
					3-12	3	07/2017

Aircraft Operating Instructions

Section	Page	Rev.	Date of Issue	Section	Page	Rev.	Date of Issue
	3-13	3	07/2017	5	5-1	3	07/2017
	3-14	3	07/2017		5-2	3	07/2017
	3-15	3	07/2017		5-3	3	07/2017
	3-16	3	07/2017		5-4	3	07/2017
	3-17	3	07/2017		5-5	3	07/2017
	3-18	3	07/2017		5-6	3	07/2017
	3-19	3	07/2017		5-7	3	02/2017
	3-20	3	07/2017		5-8	3	07/2017
					5-9	3	07/2017
					5-10	3	07/2017
4	4-1	3	07/2017				
	4-2	3	07/2017				
	4-3	3	07/2017				
	4-4	3	07/2017				
	4-5	3	07/2017				
	4-6	3	07/2017				
	4-7	3	07/2017	6	6-1	3	07/2017
	4-8	3	07/2017		6-2	3	07/2017
	4-9	3	07/2017		6-3	4	09/2020
	4-10	3	07/2017		6-4	4	09/2020
	4-11	3	07/2017		6-5	4	09/2020
	4-12	3	07/2017		6-6	4	09/2020
	4-13	3	07/2017		6-7	4	09/2020
	4-14	3	07/2017		6-8	3	07/2017
	4-15	3	07/2017		6-9	3	07/2017
	4-16	3	07/2017		6-10	4	09/2020
					6-11	4	09/2020

Aircraft Operating Instructions

Section	Page	Rev.	Date of Issue	Section	Page	Rev.	Date of Issue
	6-12	4	09/2020	8	8-1	3	07/2017
	6-13	4	09/2020		8-2	3	07/2017
	6-14	4	09/2020		8-3	3	07/2017
	6-15	3	07/2017		8-4	3	07/2017
	6-16	3	07/2017				
7	7-1	3	07/2017				
	7-2	3	07/2017	9	9-1	3	07/2017
	7-3	3	07/2017		9-2	3	07/2017
	7-4	3	07/2017		9-3	3	07/2017
	7-5	3	07/2017		9-4	3	07/2017
	7-6	3	07/2017		9-5	3	07/2017
	7-7	3	07/2017		9-6	3	07/2017
	7-8	3	07/2017				
	7-9	3	07/2017				
	7-10	3	07/2017				
				10	10-1	3	07/2017
					10-2	3	07/2017
					10-3	3	07/2017
					10-4	3	07/2017



Aircraft Operating Instructions

INTENTIONALLY LEFT BLANK

Aircraft Operating Instructions

0.3 Table of contents

	Section
TECHNICAL INFORMATION.....	0
GENERAL INFORMATION.....	1
OPERATING LIMITATIONS	2
EMERGENCY PROCEDURES	3
NORMAL PROCEDURES.....	4
PERFORMANCE	5
WEIGHT AND BALANCE	6
AIRPLANE AND SYSTEMS DESCRIPTION	7
AIRPLANE HANDLING,SERVICING AND MAINTENANCE	8
REQUIRED PLACARDS AND MARKINGS.....	9
SUPPLEMENTS	10



Aircraft Operating Instructions

INTENTIONALLY LEFT BLANK

Aircraft Operating Instructions

SECTION 1

1 General Information

1.1 *Introduction*

1.1.1 Certification

1.2 *Warnings, cautions and notes*

1.3 *Descriptive data*

1.3.1 Aircraft description

1.3.2 Power plant

1.3.3 Aircraft dimensions

1.3.4 Aircraft layout

1.4 *Definitions and abbreviations*

1.5 *Summary of performance specifications*

Aircraft Operating Instructions

1.1 Introduction

This Aircraft Operating Instructions have been prepared to provide the pilots, instructors, owners and operators with information for safe and efficient operation of BRISTELL aircraft. It also contains supplemental data supplied by the Aircraft Flight Training Supplement.

It is the pilot's responsibility to be familiar with this handbook, the special characteristics of this aircraft, and all other information and legal requirements relevant for the operation in his country. The pilot is responsible to determine the aircraft is safe for flight, and to operate the aircraft with respect to the procedures and limitations provided in this manual.

It is the owner's/operator's responsibility to have the aeroplane registered and insured, according to country-specific regulations. The aircraft owner/operator is also responsible for maintaining the aircraft in airworthy condition.

1.1.1 Certification

BRISTELL LSA is a light sport category airplane made by **BRM AERO** s.r.o., Letecká 255, 686 04 Kunovice, Czech Republic, phone: +420 773 984 338, e-mail : info@brmaero.com based on the following airworthiness requirements:

- ASTM Consensus Standards:
 - F2245
 - F2279
 - F2295and other to LSA category applicable ASTM Consensus Standards.
- Czech LAA UL-2 Standards
- EASA CS-VLA Standards

Aircraft Operating Instructions

1.2 *Warnings, cautions and notes*

The following definitions apply to warnings, cautions and notes in the Pilot Operating Handbook.

WARNING

Means that the non-observation of the corresponding procedure leads to an immediate or important degradation of the flight safety i.e. to injury or death of persons.

CAUTION

Means that the non-observation of the corresponding procedure leads to a minor or possible long term degradation of the flight safety.

NOTE

Draws attention to any special item not directly related to safety, but which is important or unusual.

Aircraft Operating Instructions

1.3 Descriptive data

1.3.1 Aircraft description

BRISTELL LSA is an airplane intended especially for recreational and cross-country flying, basic flight training, with limitation to non-aerobatics operation.

BRISTELL LSA is a single-engine, all metal, low-wing monoplane of semi-monocoque construction with two side-by-side seats. The airplane is equipped with a fixed tricycle undercarriage with steerable nose wheel.

1.3.2 Power plant

The standard power plant is composed of ROTAX 912 ULS, 4-cylinder, 4-stroke engine and FITI three blade ground adjustable propeller.

BRISTELL LSA, S/N 437/2019 is fitted with:

- Rotax 912 iS Sport engine
- Fiti Eco Competition 3LR 158 on-ground adjustable, 3 bladed propeller with composite blades.

1.3.3 Aircraft dimensions

Wing span.....26.65 ft 8.13 m

Length.....21.10 ft 6.45 m

Height7.48 ft 2.28 m

Wing area 113.02 sq ft 10.5 m²

Wing loading

Design MTOW 600 kg 11.68 lb/sq ft 57.14 kg/m²

UL MTOW 450 kg 8.78 lb/sq ft 42.86 kg/m²

UL MTOW 472.5 kg (with BRS) 9.22 lb/sq ft 45.00 kg/m²

Cockpit width 51.17 in 1.3 m

Deflections:

Rudder deflections..... 30° to each side

Elevator deflections + 30°/-15°

Aileron deflections + 24°/-17°


Flap deflections..... 0°, 10°, 20° and 30°

Aileron trim deflections + 15°/- 20°

Elevator trim deflections + 10°/- 25°

Aircraft Operating Instructions

1.3.4 Aircraft layout

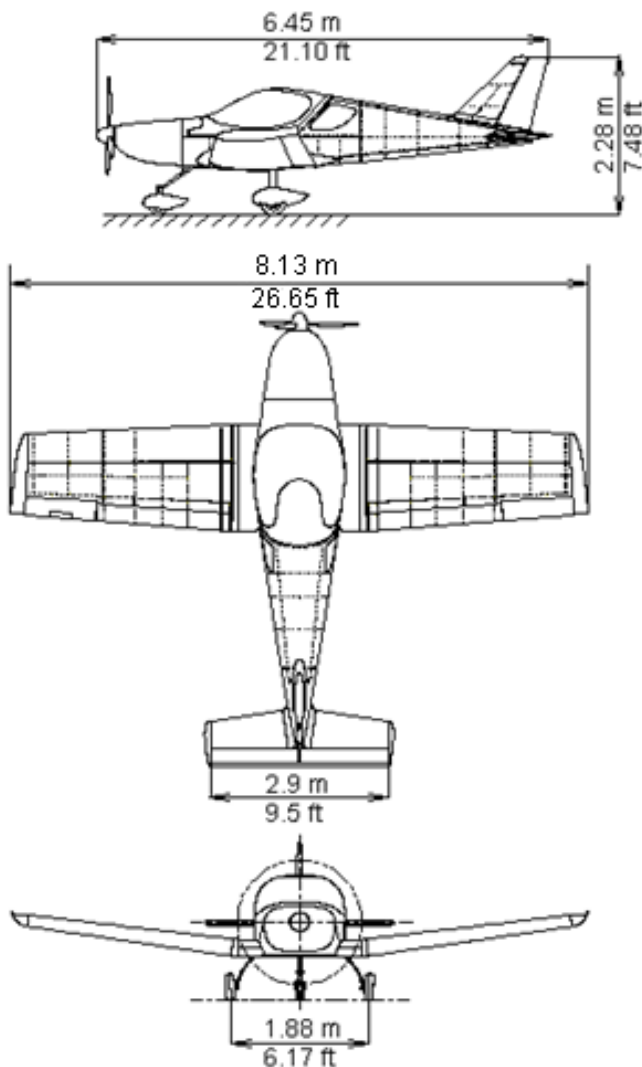

Aircraft Operating Instructions

1.4 Definitions and abbreviations

°F	temperature in degree of Fahrenheit
ASI	Airspeed Indicator
ATC	Air Traffic Control
BEACON	anti-collision beacon
CAS	Calibrated Airspeed
CG	Center of Gravity
COMM	communication transmitter
ECU	Engine Control Unit
EFIS	Electronic Flight Instrument System
ELT	Emergency Locator Transmitter
E-LSA	Experimental Light Sport Aircraft
EMS	Engine Monitoring System
ft	foot / feet
ft/min	feet per minute
GPS	Global Positioning System
hp	power unit
IAS	Indicated Airspeed
IC	Intercom
IFR	Instrument Flight Rules
in	inch
ISA	International Standard Atmosphere
knot	NM per hour
lb	pound
LAA	Light Aircraft Association of the Czech Republic
MAC	Mean Aerodynamic Chord
max.	maximum
min.	minimum or minute

Aircraft Operating Instructions

mph	statute miles per hour
NM	Nautical Mile
OAT	Outside Air Temperature
OFF	system is switched off or control element is in off-position
ON	system is switched on or control element is in on-position
POH	Pilot Operating Handbook
psi	pound per square inch - pressure unit
rpm	revolutions per minute
sec.	second
US gal	volume unit
V _A	maneuvering airspeed
V _{FE}	maximum flap extended speed
VFR	Visual Flight Rules
VMC	Visual Meteorological Conditions
V _{NE}	never exceed speed
V _{NO}	maximum designed cruising speed
V _{S1}	stall speed with wing flaps in retracted position
V _{SO}	stall speed with wing flaps in extended position
V _X	best angle of climb speed
V _Y	best rate of climb speed

Aircraft Operating Instructions

1.5 Summary of performance specifications

Performance	US units	Metric units
Gross weight (Maximum take-off weight)	1320 lb	600 kg
Top speed at sea level MCP: 5550 rpm	113 KCAS	209 km/h CAS
Cruise speed at sea level 75%: 5000 rpm	102 KCAS	189 km/h CAS
Cruise speed at sea level 65%: 4800 rpm	97 KCAS	180 km/h CAS
Full fuel range at 4000 ft pressure altitude, at 75 % MCP (5000 rpm), No fuel reserve	830 NM	1530 km
Rate of climb at sea level.....Vx	840 fpm at 60 KIAS	840 fpm at 111 km/h IAS
Rate of climb at sea level.....Vy	930 fpm at 72 KIAS	930 fpm at 133 km/h IAS
Stall speed V _{s1} (flaps retracted)	45 KCAS	83 km/h CAS
Stall speed V _{s0} (flaps fully extended)	38 KCAS	71 km/h CAS
Total fuel capacity	31.7 US gal	120 liters
Total usable fuel	31.4 US gal	119 liters
Approved types of fuel ATTENTION: Obey the latest edition of Service Instruction SI-912-016, for the selection of the correct fuel.	Min. RON 95 (min. AKI4 91) Mogas: EN 228 super Mogas: EN 228 super plus AVGAS 100LL (ASTM D910)	
Engine Maximum takeoff power	73.5 kW (100 HP) at 5800 rpm	
Engine Maximum continuous power	72 kW (97.9 HP) at 5500 rpm	
Engine Cruising power 75 % of MCP	54 kW (73.4 HP) at 5000 rpm	
Engine Cruising power 65 % of MCP	46.7 kW (63.5 HP) at 4800 rpm	
Engine Cruising power 50 % of MCP	35.9 kW (48.8 HP) at 4300 rpm	

Aircraft Operating Instructions

SECTION 2

2 Operating Limitation

2.1 *Introduction*

2.2 *Airspeed*

2.3 *Airspeed indicator markings*

2.4 *Power plant*

2.4.1 Engine operating speeds and limits

2.4.2 Fuel

2.4.3 Oil

2.4.4 Coolant

2.5 *Power plant instrument markings*

2.6 *Miscellaneous Instrument Marking*

2.7 *Weight*

2.8 *Center of gravity*

2.9 *Approved maneuvers*

2.10 *Maneuvering load factors*

2.11 *Crew*

2.12 *Kinds of operation*

2.13 *Other limitations*

Aircraft Operating Instructions

2.1 Introduction

Section 2 includes operating limitations, instrument markings and basic placards necessary for the safe operation of the aircraft, its engine, standard systems and standard equipment.

2.2 Airspeed

Airspeed limitations and their operational significance are shown below:

Speed		KIAS	IAS (km/h)	Remarks
V _{NE}	Never exceed speed	157	290	Do not exceed this speed in any operation.
V _{NO}	Max. structural cruising speed	129	240	Do not exceed this speed except in smooth air, and then only with caution.
V _A	Maneuvering speed	96	180	Do not make full or abrupt control movement above this speed, because under certain conditions full control movement may overstress the aircraft.
V _{FE}	Maximum Flap Extended Speed	75	139	Do not exceed this speed with flaps extended.

Aircraft Operating Instructions

2.3 *Airspeed indicator markings*

Airspeed indicator markings and their color-code significance are shown below:

Marking	IAS value or range		Significance
	knots	km/h	
White arc	37-75	70-139	Flap Operating Range.
Green arc	44-129	82-240	Normal Operating Range.
Yellow arc	129-157	240-290	Maneuvers must be conducted with caution and only in smooth air.
Red line	157	290	Maximum speed for all operations.

Aircraft Operating Instructions

2.4 Power plant

2.4.1 Engine operating speeds and limits

Engine Model:		ROTAX 912 iS Sport
Engine Manufacturer:		Bombardier-Rotax GMBH
Power	Max Take-off:	73.5 kW (100 HP) at 5800 rpm, max.5 min.
	Max. Continuous:	72 kW (97 HP) at 5500 rpm
	Cruising 75%:	54.0 kW (73.4 HP) at 5000 rpm
Engine speed	Max. Take-off:	5800 rpm (max. 5 min)
	Max. Continuous:	5500 rpm
	Cruising 75%:	5000 rpm
	Idling:	min 1400 rpm
Coolant temperature	Minimum:	-
	Maximum:	120 °C (248 °F)
	Optimum:	80 – 110 °C (176 - 230 °F)
Oil temperature	Minimum:	50 °C (120 °F)
	Maximum:	130 °C (266 °F)
	Normal operating:	90 – 110 °C (190 – 230 °F)
Oil pressure:	Minimum:	0.8 bar (12 psi) - below 3500 rpm
	Maximum:	7 bar (102 psi) - For a short period at cold start
	Normal:	2 - 5 bar (29-73 psi) - above 3500 rpm
Exhaust gas temp.	Maximum:	950 °C (1742 °F)
Fuel pressure	Maximum:	3.2 bar (46.5 psi)
	Minimum:	2.8 bar (40.5 psi)
Ambient temperature	Maximum in flight:	60 °C (140 °F) (manifold temperature)
	Maximum at start:	50 °C (120 °F) (ambient temperature)
	Minimum at start:	-20 °C (-13 °F) (oil temperature)

Aircraft Operating Instructions

2.4.2 Fuel

General note

NOTICE

Obey the latest edition of Service Instruction SI-912 i-001 for the selection of the correct fuel.

NOTICE

Use only fuel suitable for the respective climatic zone.

NOTE: Risk of vapour formation if using winter fuel for summer operation.

Antiknock properties

Fuels with following specification can be used:

Fuel specification	
	Usage/Description
Anti-knock properties	912 i Series
	Min. RON 95

NOTE: For fuels according to ASTM D4814 and/or fuels with RON instead of AKI (Anti Knock Index) specifications, following AKI value has to be observed: min. AKI 91

MOGAS

	Usage/Description
MOGAS	912 i Series
European standard	EN 228 Super
	EN 228 Super plus

AVGAS

AVGAS 100LL places greater stress on the valve seats due to its high lead content and forms increased deposits in the combustion chamber and lead sediments in the oil system.

	Usage/Description
AVGAS	912 i Series
Aviation Standard	AVGAS 100 LL (ASTM D910)

Fuel volume:

Wing fuel tank volume 2x16 US gal 2x60 l

Unusable fuel quantity 2x0.13 US gal 2x0.5 l

Aircraft Operating Instructions

2.4.3 Oil

Oil type

Motorcycle oil of a registered brand with gear additives.

NOTICE

At the selection of suitable lubricants refer to the additional information in the Service Information SI-912 i-001, latest edition.

Oil consumption

Max. 0.06 l/h (0.13 liq pt/h).

Oil specification

- Use only oil with API classification "**SG**" or higher!
- Due to the high stresses in the reduction gears, oils with gear additives such as high performance motor cycle oils are required.
- Because of the incorporated overload clutch, oils with friction modifier additives are unsuitable as this could result in clutch slippage during normal operation.
- Heavy duty 4-stroke motor cycle oils meet all the requirements. These oils are normally not mineral oils but semi- or full synthetic oils.
- Conventional aircraft oils (a.d.= ashless dispersant) are not suitable. Oils with ashless dispersant do not have suitable cleaning agents for modern designs such as the ROTAX 912 i Series.
- Oils primarily for Diesel engines have **insufficient high temperature properties and additives which favour clutch slipping, and are generally unsuitable.**

NOTE

Type of oil used by aircraft manufacturer is shown in Section 10 Supplement No.2.

Oil volume:

Minimum	0.856	US gal	3.2 l
Maximum	0.951	US gal	3.6 l

Aircraft Operating Instructions

2.4.4 Coolant

General note

NOTICE

Obey the latest edition of Service Instruction SI-912 i-001 for the selection of the correct coolant.

Conventional coolant

Conventional coolant mixed with water has the advantage of a higher specific thermal capacity than water-less coolant.

Application

When correctly applied, there is sufficient protection against vapor bubble formation, freezing or thickening of the coolant within the operating limits.

Use the coolant specified in the manufacturers documentation.

Mixture

NOTICE

Obey the coolant manufacturers instructions about the coolant mixture.

designation	mixture ratio %	
	concentrate	water
Conventional e.g. BASF Glysantine Protect Plus G48 anticorrosion	50	50

NOTE

Type of coolant used by aircraft manufacturer is shown in Section 10 Supplement No.2.

Coolant liquid volume:

It is about 0.66 US gal 2.5 l

Aircraft Operating Instructions

2.5 Power plant instrument markings

Analogue engine instruments markings and their color-code significance are shown below.

Rotax 912 iS Sport	Minimum Limit (red line)	Normal Operating Range (green arc)	Caution Range (yellow arc)	Maximum Range (red line)
Engine speed [RPM]	1400	1400-5500	5500-5800	5800
Oil Temperature	50 °C (120 °F)	50 – 110 °C (120 – 230 °F)	110 – 130 °C (230 – 266 °F)	130 °C (266 °F)
Exhaust Gas Temp. (EGT)	-	800 – 850 °C (1472 – 1562 °F)	850 – 950 °C (1562 - 1742 °F)	950 °C (1742 °F)
Coolant Temperature (CT)	50 °C (122°F)	50-110°C (122-230°F)	110-120 °C (230 - 248 °F)	120 °C (248 °F)
Oil Pressure	0.8 bar (12 psi)	0.8 - 5 bar (12 - 73 psi)	5 - 7 bar (73 - 102 psi)	7 bar (102 psi) cold engine starting

Aircraft Operating Instructions

2.6 Miscellaneous Instrument Marking

There is not any miscellaneous instrument marking.

2.7 Weight

Empty weight (standard equipment) 715 lb 325 kg

NOTE

Actual empty weight is shown in SECTION 6

Max.take-off weight..... 1320 lb 600 kg

Max.landing weight 1320 lb 600 kg

Max. weight of fuel (120 l)..... 192 lb 87 kg

Max. baggage weight:

Baggage compartment behind seats33 lb 15 kg

Wing lockers (optional) 44 lb 20 kg each

Front locker (optional)..... 22 lb 10 kg

2.8 Center of gravity

Operating C.G. range 25 to 35 % of MAC

MAC..... 54.114 in 1374.5 mm

MAC_LE 15.988 in 406.1 mm

MAC_LE = Distance of MAC origin from the Datum

Datum: Firewall.

2.9 Approved maneuvers

Airplane Category: S-LSA (Special Light Sport Aircraft)

The BRISTELL LSA is approved for normal and below listed maneuvers:

- Steep turns not exceeding 60° bank
- Lazy eights
- Chandelles
- Stalls (except whip stalls)

WARNING

Aerobatics and intentional spins are prohibited!

Aircraft Operating Instructions

2.10 Maneuvering load factors

Maximum positive limit load factor +4 g

Maximum negative limit load factor - 2 g

2.11 Crew

Number of seats 2

Minimum crew 1 pilot in the left seat

Minimum crew weight 121 lb

Maximum crew weight see SECTION 6

WARNING

Do not exceed maximum take-off weight!

2.12 Kinds of operation

There are permitted Day VFR flights.

Night VFR flights and IFR flights under VMC are permitted if the aeroplane is appropriately equipped (e.g. FAR 91.205) and when the pilot has appropriate rating.

WARNING

IFR flights under IMC and intentional flights under icing conditions are PROHIBITED!

Minimum instruments and equipment list for VFR flights:

- Airspeed indicator
- Altimeter
- Compass (not required by ASTM F 2245)
- Fuel quantity indicator
- Tachometer (RPM)
- Oil temperature indicator
- Oil pressure indicator
- Cylinder head temperature indicator (Coolant temp indicator)

2.13 Other limitations

WARNING

No smoking on board of the aircraft!

Aircraft Operating Instructions

SECTION 3

3 EMERGENCY PROCEDURES

3.2 *Engine Failure*

- 3.2.1 Engine failure during take-off run
- 3.2.2 Engine failure during take-off
- 3.2.3 Engine failure in flight

3.3 *In-flight Engine Starting*

3.4 *Smoke and Fire*

- 3.4.1 Fire on ground at engine starting
- 3.4.2 Fire on ground with engine running
- 3.4.3 Fire during take-off
- 3.4.4 Fire in flight
- 3.4.5 Fire in the cockpit

3.5 *Glide*

- 3.5.1 Emergency descent

3.6 *Landing Emergencies*

- 3.6.1 Emergency landing
- 3.6.2 Precautionary landing
- 3.6.3 Landing with a flat tire
- 3.6.4 Landing with a defective landing gear.

3.7 *Recovery from Unintentional Spin*

3.8 *Other Emergencies*

- 3.8.1 Vibration
- 3.8.2 Autopilot malfunction
- 3.8.3 Inadvertent icing encounter
- 3.8.4 Loss of primary instruments
- 3.8.5 Loss of flight controls

3.9 *Rotax 912 iS Engine abnormal operation*

- 3.9.1 Fault indicated by the warning lamps

Aircraft Operating Instructions

- 3.9.2 Engine not responding to power inputs**
- 3.9.3 Occurrence of uncharacteristic and severe engine vibrations**
- 3.9.4 Re-Start during flight**
- 3.9.5 Failure of the EMS power supply**
- 3.9.6 Exceeding max.admissible engine speed**
- 3.9.7 Exceeding of max.coolant temperature**
- 3.9.8 Exceeding of max.admissible oil temperature**
- 3.9.9 Oil pressure below minimum - during flight**
- 3.9.10 Oil pressure below minimum - on ground**
- 3.9.11 Oil pressure above permitted range at low ambient temperatures**
- 3.9.12 Engine on fire or fire in the engine compartment**
- 3.9.13 Fuel pressure outside range**
- 3.9.14 Maximum permissible exhaust temperatures exceeded**
- 3.9.15 EMS voltage supply below the minimum required level**
- 3.9.16 The sprag clutch decouples not from starter**
- 3.10 Rotax 912 iS Engine Trouble Shooting***
 - 3.10.1 Engine does not start**
 - 3.10.2 Knocking under load**
 - 3.10.3 Low oil pressure**
 - 3.10.4 Oil level is increasing**
 - 3.10.5 Engine hard to start at low temperature**

Aircraft Operating Instructions

3.1 Introduction

Section 3 provides checklists and amplified procedures for coping with various emergencies that may occur. Emergencies caused by aircraft or engine malfunction are extremely rare if proper pre-flight inspections and maintenance are practiced.

However, should an emergency arise, the basic guidelines described in this section should be considered and applied as necessary to correct the problem.

3.2 Engine Failure

3.2.1 Engine failure during take-off run

1. Throttle - reduce to idle
2. Ignition (LANE A,B) - switch off
3. Apply brakes

3.2.2 Engine failure during take-off

1. Speed - gliding at 65 KIAS (120 km/h)
2. Altitude - below 150 ft: land in take-off direction
- over 150 ft: choose a landing area
3. Wind - find direction and velocity
4. Landing area - choose free area without obstacles
5. Flaps - extend as needed
6. Fuel Selector - shut off
7. Ignition (LANE A,B) - switch off
8. Safety harness - tighten
9. Master switch - switch off before landing
10. Land

Aircraft Operating Instructions

3.2.3 Engine failure in flight

1. Push control stick forward
2. Speed - gliding at 65 KIAS (120 km/h)
3. Altitude - below 150 ft: land in take-off direction
- over 150 ft: choose a landing area
4. Wind - find direction and velocity
5. Landing area - choose free area without obstacles
6. Flaps - extend as needed
7. Fuel Selector - shut off
8. Ignition (LANE A,B) - switch off
9. Safety harness - tighten
10. Master switch - switch off before landing
11. Land

3.3 In-flight Engine Starting

Engine Stop

1. If the propeller continues to rotate during flight by windmilling, but the speed is not sufficient to start the engine, the electric starter can be used without problems. You must not wait until the propeller stands still.
2. Electric pumps - ON
3. Fuel Selector - switch to second fuel tank
4. Throttle lever - to idling position
5. EMS main switch - AUTO
6. LANE select switch A - ON
7. LANE select switch B - ON
8. Start power switch - switch ON
9. Starter button - press until the engine starts to run
10. Start power switch - switch off after 15 sec.

WARNING

Do not try to re-start the engine in the case, that the reason for the engine stop was empty fuel tank!

Aircraft Operating Instructions

3.4 Smoke and Fire

3.4.1 Fire on ground at engine starting

1. Starter - keep in starting position
2. Fuel Selector - close
3. Throttle - full power
4. Ignition (LANE A,B) - switch off
5. Leave the airplane
6. Extinguish fire by a fire extinguisher (if available) or call for a fire-brigade if you cannot do it.
7. Locate the cause of fire and resolve the error before next flight by qualified staff (authorized by the Aviation Authorities).
8. An entry in the logbook must be made.
9. A maintenance inspection should be carried out.

3.4.2 Fire on ground with engine running

1. Heating - close
2. Fuel selector - close
3. Throttle - full power
4. Ignition (LANE A,B) - switch off
5. Leave the airplane
6. Extinguish fire by a fire extinguisher (if available) or call for a fire-brigade if you cannot do it.
7. Locate the cause of fire and resolve the error before next flight by qualified staff (authorized by the Aviation Authorities).
8. An entry in the logbook must be made.
9. A maintenance inspection should be carried out.

3.4.3 Fire during take-off

1. Speed - 65 KIAS (120 km/h)
2. Heating - close
3. Fuel Selector - close
4. Throttle - full power
5. Ignition (LANE A,B) - switch off
6. Land and stop the airplane

Aircraft Operating Instructions

7. Leave the airplane
8. Extinguish fire by a fire extinguisher (if available) or call for a fire-brigade if you cannot do it.
9. Locate the cause of fire and resolve the error before next flight by qualified staff (authorized by the Aviation Authorities).
10. An entry in the logbook must be made.
11. A maintenance inspection should be carried out.

3.4.4 Fire in flight

1. Heating - close
2. Fuel Selector - close
3. Throttle - full power
4. Master switch - switch off
5. Ignition (LANE A,B) - switch off
6. Choose of area - heading to the nearest airport or choose emergency landing area
7. Emergency landing - perform according to 3.6
8. Leave the airplane
9. Extinguish fire by a fire extinguisher (if available) or call for a fire-brigade if you cannot do it.
10. Locate the cause of fire and resolve the error before next flight by qualified staff (authorized by the Aviation Authorities).
11. An entry in the logbook must be made.
12. A maintenance inspection should be carried out

NOTE

Engine will stop immediately after master switch switched off.

WARNING

Do not attempt to re-start the engine!

3.4.5 Fire in the cockpit

1. Master switch - switch off
2. Heating - close

Aircraft Operating Instructions

3. Use a fire extinguisher (if available).
4. If not land a leave the airplane as soon as possible

3.5 ***Glide***

An example of the use of gliding is in the case of engine failure

1. Speed - recommended gliding speed 65 KIAS
120 km/h

3.5.1 Emergency descent

Emergency descent means to get on the ground as quickly as possible. It is used in case of a big problem encountered in flight like engine fire, smoke in the cockpit, or any other serious problem.

1. Throttle lever - fully pulled to set idle
2. Flaps - retracted
3. Control stick - push forward to bring airplane into descent
4. Speed - V_{NO} 129 KIAS (240 km/h)
Do not exceed this speed except in smooth air, and then only with caution.
- V_{NE} 157 KIAS (290 km/h)
Do not exceed this speed in any operation.

Steep spiral dive with max. 60° bank may be used however be carefull to not exceed limit load factor during spiral. You can monitor area below you during a spiral.

3.6 ***Landing Emergencies***

3.6.1 Emergency landing

Emergency landings are generally carried out in the case of engine failure and the engine cannot be re-started.

1. Speed - adjust for optimum gliding 65 KIAS
120 km/h
2. Trim - adjust
3. Safety harness - tighten
4. Flaps - extend as needed
5. COMM - report your location if possible
6. Fuel Selector - close
7. Ignition (LANE A,B) - switch off

Aircraft Operating Instructions

8. Master switch - switch off
9. Perform approach without steep turns and land on chosen landing area.

3.6.2 Precautionary landing

A precautionary landing is generally carried out in the cases where the pilot may be disorientated, the aircraft has no fuel reserve or possibly in bad weather conditions.

1. Choose landing area, determine wind direction
2. Report your intention to land and land area location.
3. Perform low-altitude passage into wind over the right-hand side of the chosen area with flaps extended as needed and thoroughly inspect the landing area.
4. Perform circle pattern.
5. Perform approach at increased idling with flaps fully extended.
6. Reduce power to idle when flying over the runway threshold and touch-down at the very beginning of the chosen area.
7. After stopping the airplane switch off all switches, shut off the fuel selector, lock the airplane and seek for assistance.

NOTE

Watch the chosen area steadily during precautionary landing.

3.6.3 Landing with a flat tire

1. During landing keep the damaged wheel above ground as long as possible using the ailerons control
2. Maintain the direction on the landing roll out, applying rudder control.

3.6.4 Landing with a defective landing gear.

1. If the main landing gear is damaged, perform touch-down at the lowest practicable speed and if possible, maintain direction during landing run.
2. If the nose wheel is damaged perform touch-down at the lowest practicable speed and hold the nose wheel above the ground by means of the elevator control as long as possible.

Aircraft Operating Instructions

3.7 Recovery from Unintentional Spin

WARNING

Intentional spins are prohibited!

There is no uncontrollable tendency of the airplane to enter into a spin provided the normal piloting techniques are used.

Unintentional spin recovery technique:

1. Throttle - idle
2. Lateral control - ailerons neutralized
3. Rudder pedals - full opposite rudder
4. Rudder pedals - neutralize rudder immediately when rotation stops
5. Longitudinal control - neutralize or push forward and recover dive.

3.8 Other Emergencies

3.8.1 Vibration

If any forced aircraft vibrations appear, it is necessary:

1. To set engine speed to such power rating where the vibrations are lowest.
2. To land on the nearest airfield or to perform a precautionary landing according to 3.6

3.8.2 Autopilot malfunction

In the case, that autopilot starts to not work properly, press immediately red button "AP OFF" on the instrument panel.

WARNING

Take-Off, climb, Approach and landing with AP "ON" or with malfunction AP are PROHIBITED.

Aircraft Operating Instructions

3.8.3 Inadvertent icing encounter

WARNING

Intentional flights under icing conditions are PROHIBITED!

If icing is inadvertently encountered then:

1. Pitot heat (if installed) - ON
2. Exit icing conditions - change altitude or turn back.
3. Cockpit heating - pull knob to ON
4. Up/Down knob - pushed forward (UP) to defrost windshield

3.8.4 Loss of primary instruments

If primary instruments are lost and the aircraft is fitted with the backup instruments then use these to safely complete the flight.

If no backup instruments are installed then visually check the aircraft altitude and attitude and land as soon as practicable.

Aircraft Operating Instructions

3.8.5 Loss of flight controls

Loss of control may have several reasons like a failure of the control system, jamming, disconnection, strong turbulence, unrecoverable spin, pilot disorientation, etc.

If loss of a control appears e.g. due to jamming or disconnection, then some control might be still possible:

Lost control	Action
Ailerons	Some degree of roll control is available by using the secondary effect of rudder. Effectiveness of rudder may be increased by rapid bursts of power. Aircraft with a jammed aileron can be landed in a slip, preferably against a crosswind.
Elevator	Try to use elevator trim to control airplane longitudinally. Keep in mind that trim control works considerably slower than elevator control. Engine power may be used to pitch up. Before landing, when the airplane will enter ground effect, will be needed to apply a slight nose-up pitch as the airplane enters ground effect. Small shot of power in addition to the trim up may be needed. Wing flap control may be used to pitch down.
Rudder	Some degree of yaw control is available by using the secondary effect of ailerons.
Wing flaps	The flaps are mechanically interconnected and have the electrical control. If the electrical control would fail or if the flaps would jamm in any position, then adjust elevator trim to trim flaps pitching moment. If (in spite of flaps mechanical interconnection) one flap would extend and the aircraft rolls then immediately use the opposite ailerons and rudder to eliminate pitching and rolling moment.

Aircraft Operating Instructions

3.9 Rotax 912 iS Engine abnormal operation

WARNING

Non-compliance can result in serious injuries or death!
At unusual engine behaviour conduct checks as per Maintenance Manual Line Chapter 05-50-00 before next flight

NOTE

Further checks – see Engine Maintenance Manual

3.9.1 Fault indicated by the warning lamps

Warning lamps

NOTE

Reduce engine power setting to the minimum necessary and carry out precautionary landing.

LANE A	LANE B	Action on ground	Action during flight
OFF	Flashing	One way flight to maintenance hangar permissible	Flight is possible to your destination at your own discretion
Flashing	OFF	One way flight to maintenance hangar permissible	Flight is possible to your destination at your own discretion
OFF	ON	Flight not permissible	Land the aircraft
Flashing	Flashing	Flight not permissible	Land the aircraft
Flashing	ON	Flight not permissible	Land the aircraft
ON	OFF	Flight not permissible	Land the aircraft
ON	Flashing	Flight not permissible	Land the aircraft
ON	ON	Flight not permissible	Land the aircraft

ON = permanently on

Landing: Take the next landing opportunity (airfield, airport) at your own discretion.

NOTE

If a warning lamp flashes, it indicates an error with lower severity (Fault) that has been detected by the internal testing procedures of the ECU. In this case, the ECU continues to operate normally. There will be no transfer of control of the ignition and injection to the error-free LANE.

If a warning lamp remains on permanently, it indicates that a fatal error with higher severity (failure) has been detected by the internal testing procedures of the ECU. In this case, the ECU will continue to

Aircraft Operating Instructions

operate in an alternative control mode, which will transfer the control of ignition and injection to the error-free LANE.

Regular operation as well as alternative control modes of the ECU are able to represent the full engine power. Differences arise only in the efficiency of the engine.

3.9.2 Engine not responding to power inputs

Engine vibrations

- Possible breakage of throttle valve actuation/linkage.
- Limited flight operation with available power possible.
- A maintenance inspection should be carried out.

3.9.3 Occurrence of uncharacteristic and severe engine vibrations

- If the vibrations occur in conjunction with a loss of power then the engine may only be firing on 3 cylinders.
- Limited flight operation.
- A maintenance inspection should be carried out.

3.9.4 Re-Start during flight

Engine stop

- If the propeller continues to rotate during flight by windmilling, but the speed is not sufficient to start the engine, the electric starter can be used without problems. You must not wait until the propeller stands still.

3.9.5 Failure of the EMS power supply

Failure of the EMS

- If the EMS power supplies (alternator A) fails then the ECU automatically switches one-time over to the second EMS power supply (alternator B).

NOTE

No charging of battery!

- While alternator B runs, no power drop is recognizable.
- Failure of both EMS power supplies (alternator A/B) result in engine stoppage.

Remedy: Switch „ON“ the **backup battery switch**. In this case the power supply is provided by the aircraft battery.

- Land the aircraft at the next available opportunity.

Aircraft Operating Instructions

- A maintenance inspection should be carried out.

3.9.6 Exceeding max.admissible engine speed

Exceeding engine speed

- Reduce the engine speed. Any exceeding of the max.admissible engine speed has to be entered by the pilot into logbook, stating duration and extent of over engine speed.

3.9.7 Exceeding of max.coolant temperature

Exceeding coolant temperature

CAUTION

Reduce engine power setting to the minimum necessary and carry out precautionary landing.

- Any exceeding of the max.admissible coolant temperature has to be entered by the pilot into logbook, stating duration and extent of over-temperature condition.
- A maintenance inspection should be carried out.
- Check the ECU error log file.

3.9.8 Exceeding of max.admissible oil temperature

Exceeding oil temperature

CAUTION

Reduce engine power setting to the minimum necessary and carry out precautionary landing.

- Any exceeding of the max.admissible oil temperature has to be entered by the pilot into logbook, stating duration and extent of over-temperature condition.
- A maintenance inspection should be carried out.
- Check the ECU error log file.

3.9.9 Oil pressure below minimum - during flight

Oil pressure too low

CAUTION

Reduce engine power setting to the minimum necessary and carry out precautionary landing.

- Check oil system.
- A maintenance inspection should be carried out.
- Check the ECU error log file.

Aircraft Operating Instructions

3.9.10 Oil pressure below minimum - on ground

Oil pressure too low

CAUTION

Immediately stop the engine and check for reason. Check oil system.

- Check oil quantity in oil tank.
- Check oil quality. See also Chapter 2.4 of the Engine Manual.
- A maintenance inspection should be carried out.

3.9.11 Oil pressure above permitted range at low ambient temperatures

Oil pressure too high

- Reduce engine speed and check the oil pressure again once it has reached a higher oil temperature.
- A maintenance inspection should be carried out.
- Check the ECU error log file.

3.9.12 Engine on fire or fire in the engine compartment

Engine on fire

WARNING

Carry out emergency procedures as prescribed in 3.6.1 Emergency landing.

- After landing locate the cause of fire and resolve the error before next flight by qualified staff (authorized by the Aviation Authorities).
- An entry in the logbook must be made.
- A maintenance inspection should be carried out.

3.9.13 Fuel pressure outside range

Exceeding fuel pressure

CAUTION

Reduce engine power setting to the minimum necessary and carry out precautionary landing.

- If the pressure is too high, switch the AUX-pump OFF. If this has no effect then limited flight operation with reduced power is possible.
- If the pressure is too low, switch the AUX-pump ON. If this has no effect then limited flight operation with reduced power is possible.
- A maintenance inspection should be carried out.

Aircraft Operating Instructions

3.9.14 Maximum permissible exhaust temperatures exceeded

Exceeded exhaust temperatures

CAUTION

Reduce engine power setting to the minimum necessary and carry out precautionary landing.

- Check the exhaust temperature
- Oil and coolant limits must not be exceeded.
- A maintenance inspection should be carried out.

3.9.15 EMS voltage supply below the minimum required level

Voltage supply below level

- Limited flight operation is possible if the voltage (alternator A or B) is OK here.
- Proceed according to 3.9.5 Failure of the EMS power supply if this has no effect.
- A maintenance inspection should be carried out.

3.9.16 The sprag clutch decouples not from starter

Sprag clutch is permanently in engagement position

CAUTION

Switch the engine "OFF". Risk of fire and danger of the electric starter overheating.

- Move the throttle lever to the idle position.
- Set the **Master switch** to "**OFF**".
- A maintenance inspection should be carried out.

Aircraft Operating Instructions

3.10 Rotax 912 iS Engine Trouble Shooting

Introduction

All checks in accordance with the Engine Maintenance Manual (current issue/revision).

WARNING

Non compliance can result in serious injuries or death!
Only qualified staff (authorized by the Aviation Authorities) trained on this particular engine, is allowed to carry maintenance and repair work.

NOTE

If the following hints regarding remedy do not solve the problem, contact an authorized workshop. The engine must not be operated until the problem is rectified.

3.10.1 Engine does not start

Possible cause	Remedy
Turn OFF the LANE select witch A/B.	Turn ON the LANE select witch A/B.
Turn OFF the Master switch .	Turn ON the Master switch to.
Closed fuel selector/valve.	Open valve or clean filter, alternatively renew filter. Check fuel system for leakage.
No fuel in tank.	Refuel.
Fuel pumps	Set both to "ON".
Starting speed too low, faulty or discharged battery.	Fit fully charged battery.
Starting speed too low, starting problems on cold engine.	Use top quality, low friction oil; allow for sufficient cooling period to counter for performance drop on hot starter; preheat engine.
Wrong fuel (Jet fuel or Diesel)	Change of fuel

Aircraft Operating Instructions

3.10.2 Knocking under load

Possible cause	Remedy
Octane rating of fuel too low.	Use fuel with higher octane rating.
Intake air temperature too high.	Reduce the power. Check air filter according to Engine Maintenance Manual Line Chapter 12-20-00.

3.10.3 Low oil pressure

Possible cause	Remedy
Not enough oil in oil tank.	Refill oil

3.10.4 Oil level is increasing

Possible cause	Remedy
Oil too cold during engine operation.	Cover oil cooler surface, maintain the oil temperature prescribed.
Contamination with diesel fuel.	Check fuel.

Aircraft Operating Instructions

3.10.5 Engine hard to start at low temperature

Possible cause	Remedy
Starting speed too low.	Preheat engine.
Low charge battery.	Fit fully charged battery.
High oil pressure.	At cold start a pressure reading of up to around 7 bar (102 psi) does not indicate a malfunction.
Oil pressure too low after cold start	Too much resistance in the oil suction system at low temperatures due to cold oil. Stop engine and preheat oil. After a cold start the oil tank must be observed and the pressure should be above 1.5 bar (22 psi). Otherwise, the speed must be lowered again, because not enough cold oil can be sucked. If oil pressure is reading lower than 1 bar (15 psi) oils with lower viscosity are to be used. See SI-912 i-001, current issue.

NOTE

Oil pressure must be measured at idle at an oil temperature of minimum 50 °C (120 °F).

Be sure the oil pressure does not go below minimum at idle.



Aircraft Operating Instructions

INTENTIONALLY LEFT BLANK

Aircraft Operating Instructions

SECTION 4

4 NORMAL PROCEDURES

4.2 *Assembly and Disassembly*

4.3 *Pre-flight Inspection*

4.4 *Normal procedures*

4.4.1 Before engine starting

4.4.2 Engine starting

4.4.3 Engine warm up, Engine check

4.4.3.1 Engine warm up

4.4.3.2 Ignition check

4.4.3.3 Check of fuel pumps

4.4.4 Taxiing

4.4.5 Before take-off

4.4.6 Take-off

4.4.7 Short field take-off

4.4.8 Soft field take-off

4.4.9 Climb

4.4.10 Cruise

4.4.11 Descent

4.4.12 Before landing

4.4.13 Balked Landing (Go around)

4.4.14 Landing

4.4.15 Short field landing

4.4.16 Soft field landing

4.4.17 After landing

4.4.18 Engine shutdown

4.4.19 Aircraft parking and tie-down

4.4.20 Flight in rain

Aircraft Operating Instructions

4.1 Introduction

Section 4 provides checklists and recommended procedures for normal operation of the aircraft.

4.2 Assembly and Disassembly

Refer to the BRISTELL LSA Maintenance and Inspection Procedures manual.

4.3 Pre-flight Inspection


Carry out the pre-flight inspection every day prior to the first flight or after airplane assembly. Incomplete or careless inspection can cause an accident. Carry out the inspection following the instructions in the Inspection Check List.

NOTE

The word "condition" in the instructions means a visual inspection of surface for damage deformations, scratching, chafing, corrosion or other damages, which may lead to flight safety degradation.

Aircraft Operating Instructions

The manufacturer recommends carrying out the pre-flight inspection as follows:

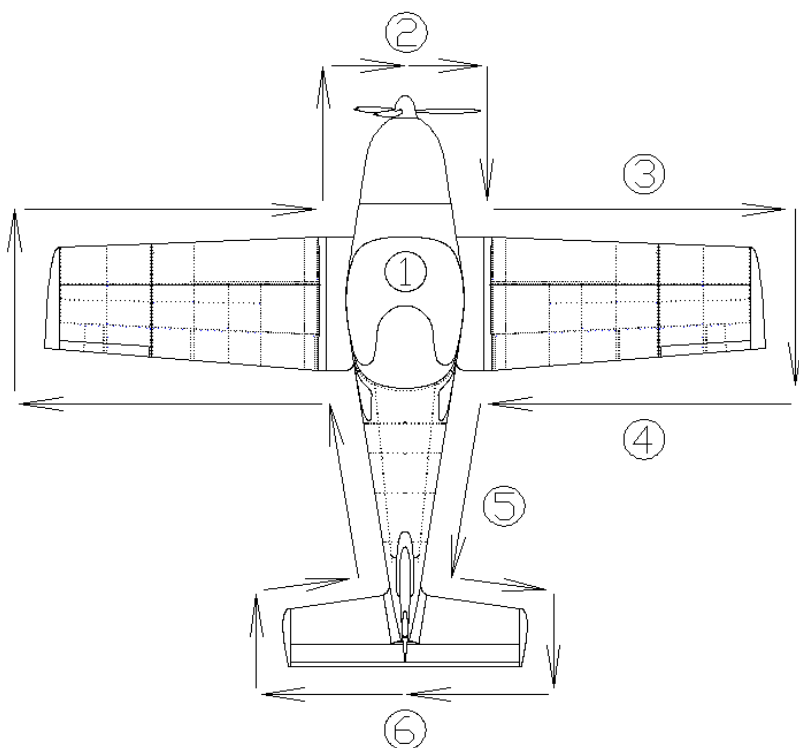

Aircraft Operating Instructions

Inspection Check List

①	<ul style="list-style-type: none"> – Ignition (LANE A,B) - OFF – Master switch - ON – Fuel gauge ind. - check fuel quantity – Master switch - OFF – Avionics - check condition – Control system - visual inspection, function, clearance, free movement up to stops – Canopy - check wing flaps operation – Check cockpit for loose objects - condition of attachment, cleanness
②	<ul style="list-style-type: none"> – Engine cowling condition – Propeller and spinner condition – Engine mount and exhaust manifold condition – Oil and coolant quantity check – Visual inspection of the fuel and electrical system – Fuel system draining – Other actions according to the engine manual
③	<ul style="list-style-type: none"> – Wing surface condition – Leading edge condition – Pitot tube condition
④	<ul style="list-style-type: none"> – Wing tip - surface condition, attachment – Aileron - surface condition, attachment, clearance, free movement – Flap - surface condition, attachment, clearance
⑤	<ul style="list-style-type: none"> – Landing gear - wheel attachment, brakes, condition and pressure of tires – Wing lower surface and fuselage bottom surface condition
⑥	<ul style="list-style-type: none"> – Vertical tail unit - condition of surface, attachment, free movement, rudder stops – Horizontal tail unit - condition of surface, attachment, free movement, elevator stops
	<ul style="list-style-type: none"> – The check on left side of the fuselage and wing is the same as on right side

Aircraft Operating Instructions

Rotax 912 iS Daily Checks:

Step	Procedure
1	Verify coolant level in the expansion tank, replenish as required up to the top. The max.coolant level must flush with the bottom of filler neck.
2	Verify coolant level in the overflow bottle, replenish as required. The coolant level must be between max. and min. mark.
3	Turn propeller slowly by hand in direction of engine rotation several times and observe engine for odd noises or excessive resistance and normal compression.
4	Verify free movement of throttle valve and the complete range.
5	Inspect exhaust system for damages, leakage and general condition.
6	Visually inspect sensors/wiring harness for mechanical and thermal damages.
7	Check for any oil, coolant, and fuel leaks. If leaks are evident, rectify and repair them before next flight.
8	Check oil level and add oil if necessary. The oil level should be in the upper half (between the "50%" and the "max" mark and should never falls below the "min mark. Prior to long flights oil should be added so that the oil level reaches the "max" mark.

WARNING

Visually check fuel level in each tank before each take-off to be sure that you have sufficient fuel quantity for the planned flight.

CAUTION

In case of long-term parking it is recommended to turn the engine several times (**Master switch and LANE A,B OFF!**) by turning the propeller. Always handle the blade area by the palm i.e. do not grasp only the blade edge. It will facilitate engine starting.

Aircraft Operating Instructions

4.4 Normal procedures

4.4.1 Before engine starting

1. Control system - free & correct movement
2. Canopy - clean
3. Brakes - fully applied
4. Safety harness - tighten
5. Rudder pedals - set to required position

WARNING

Adjusting of rudder pedals position during flight is PROHIBITED.

4.4.2 Engine starting

Follow engine Operators manual for **Engine start** procedure:

1. Fuel Selector - ON - LEFT or RIGHT FUEL TANK
2. Accomplish aircraft specific startup
 - activate Flight display
3. Master switch - ON
4. Fuel pump - ON, only use one fuel pump. Using both fuel pumps can lead to a bad start behaviour.
5. Lane select switch A - ON
- Lane select switch B - ON
6. Start Power switch - Activate it during steps 7,8,9, and 10
7. Warning lamps - check if illuminate and extinguish after around 3 sec. If not, consult Engine Manual Chapter 4.
8. Fuel pressure - check whether it reached 3 bar
9. Throttle - put throttle 1-2 cm of its opening
10. Start button - press until engine runs and release after engine has reached 1500 rpm or more (stable run)
11. Starter power switch - OFF after 15 sec, just the engine reached min. 1600 rpm. Activate starter for max. 10 sec, then wait 2 minutes for cooling.
12. Throttle - reduce throttle valve position as required

Aircraft Operating Instructions

13. Engine instruments compliance

- check warning lamps and ensure with engine operating limits. Monitor oil pressure which should rise within 10 sec.

RPM increase is only permitted at steady oil pressure above 3 bar.

14. Throttle

- Increase engine speed above 2500 rpm and hold it for 5 sec.

15. Engine instruments compliance

- check warning lamps and ensure with engine operating limits.

CAUTION

The starter should be activated for a maximum of 10 sec., followed by 2 min. pause for engine cooling.

As soon as engine runs, adjust throttle to achieve smooth running at approx. 2000 rpm. Check the oil pressure, which should increase within 10 sec. Increase the engine speed after the oil pressure has reached 3 bar (43 psi) and is steady.

To avoid shock loading, start the engine with the throttle lever set for idling or 10% open at maximum, then wait 3 sec to reach constant engine speed before new acceleration.

Only one ignition (LANE A or B) should be switched on (off) during ignition circuit check.

4.4.3 Engine warm up, Engine check

4.4.3.1 Engine warm up

Prior to engine check block the main wheels using chocks. Initially warm up the engine to 2000 rpm for approx. 2 minutes, then continue to 2500 rpm till oil temperature reaches 122 °F (50 °C). The warm up period depends on ambient air temperature.

Switch "ON" propeller control and check propeller adjustment in all adjustment range.

4.4.3.2 Ignition check

Check both ignition circuits at 4000 rpm.

Aircraft Operating Instructions

If the engine speed drops or any error messages are present from the EMS then find out what the cause is and take corresponding action to rectify the problem.

1. Engine speed - 4000 rpm
2. Lane A selector switch- OFF. Observe the rev counter.
The speed drop may not exceed 180 rpm.
3. Lane A selector switch- ON
4. Lane B selector switch- OFF. Observe the rev counter.
The speed drop may not exceed 180 rpm.
5. Lane B selector switch- ON
6. Reduce to idle speed

NOTE

Only one ignition (LANE A or B) should be switched on (off) during ignition circuit check.

4.4.3.3 Check of fuel pumps

1. Engine speed - set to 2000 rpm
2. Aux fuel pump - deactivate for 5 sec
3. Fuel pressure - check
4. Aux fuel pump - activate
5. Main fuel pump - deactivate for 5 sec
6. Fuel pressure - check. If not within limits, find cause.
Do not continue in operation until cause is find and problem rectified.
7. Set max. power for verification of max. speed with given propeller and engine parameters (temperatures and pressures).
8. Check acceleration from idling to max. power. If necessary, cool the engine at 3000 rpm before shutdown.

CAUTION

The engine check should be performed with the aircraft heading upwind and not on a loose terrain (the propeller may suck grit which can damage the leading edges of blades).

Aircraft Operating Instructions

4.4.4 Taxiing

Apply power and brakes as needed. Apply brakes to control movement on ground. Taxi carefully when wind velocity exceeds 20 knots (10 m/s). Hold the control stick in neutral position, or in a position that properly deflects a crosswind.

4.4.5 Before take-off

- | | |
|-------------------|---------------------------|
| 1. Altimeter | - set |
| 2. Trim | - set neutral position |
| 3. Control system | - check free movement |
| 4. Cockpit canopy | - closed |
| 5. Safety harness | - tighten |
| 6. Fuel Selector | - ON (LEFT or RIGHT tank) |

NOTE

AIRCRAFT IS EQUIPPED WITH RETURN LINES IN BOTH FUEL TANKS.

- | | |
|------------------------|--------------------|
| 7. Ignition (LANE A,B) | - ON |
| 8. El. pumps | - ON |
| 9. Propeller control | - ON |
| 10. Wing flaps | - extend as needed |
| 11. Autopilot | - OFF |

Aircraft Operating Instructions

4.4.6 Take-off

1. Brakes - apply to stop wheel rotation
2. Take-off power - throttle fully forward
3. Engine speed - check rpm
4. Instruments - check if within limits
5. Nose wheel unstick - 55 km/h (30 KIAS)
6. Airplane lift-off - 75 km/h (40 KIAS)
7. Wing flaps - retract when speed of 120 km/h (65 KIAS) is reached, at altitude of 150 ft
8. Make transition to climb

WARNING

The Take-off is prohibited if:

- The engine is running unsteadily
- The engine instruments values are beyond operational limits
- The crosswind velocity exceeds permitted limits (see 5.2.8)
- Autopilot is "ON"

4.4.7 Short field take-off

1. Use all available runway
2. Heading - set
3. Flaps - 30°
4. Trim - as required
5. Hold brakes
6. Throttle - fully forward (5800 rpm, max. 5min.)
7. Engine instruments - check within limits
8. Release brakes after rpm increase
9. Accelerate and pull control stick aft to lift off the nose wheel as soon as possible.
10. As aircraft becomes airborne, level off in ground effect to accelerate to:
 - No obstacle: Vy (best rate of climb) 72 KIAS (133 km/h)
 - Obstacle: Vx (best angle of climb) 60 KIAS (111 km/h)
11. Flaps - set to 10°
12. Climb at:
 - No obstacle: Vy (best rate of climb) 72 KIAS (133 km/h)
 - Obstacle: Vx (best angle of climb) 60 KIAS (111 km/h)

Aircraft Operating Instructions

- 13. Trim - adjust
- 14. Flaps - retract at Vy 72 KIAS (133 km/h)
or at 150 ft

4.4.8 Soft field take-off

- 1. Inspect field condition checking for grass height, bumps, holes, debris, wetness.
- 2. Taxiing - control stick fully aft
- 3. Heading - set
- 4. Flaps - 30°
- 5. Trim - as required
- 6. Throttle - fully forward (5800 rpm, max. 5min.)
- 7. Control stick - full aft pressure during T/O run to lift off
nose wheel as soon as possible.
- 8. As aircraft becomes airborne, level off in ground effect to accelerate to:
 - No obstacle: Vy (best rate of climb) 72 KIAS (133 km/h)
 - Obstacle: Vx (best angle of climb) 60 KIAS (111 km/h)
- 9. Flaps - set to 10°
- 10. Climb
 - No obstacle: Vy (best rate of climb) 72 KIAS (133 km/h)
 - Obstacle: Vx (best angle of climb) 60 KIAS (111 km/h)
- 11. Trim - adjust
- 12. Flaps - retract at Vy 72 KIAS (133 km/h)
or at 150 ft

Aircraft Operating Instructions

4.4.9 Climb

- | | |
|-------------------|--|
| 1. Best ROC speed | - Best rate of climb speed (Vy):
72 KIAS (133 km/h) |
| | - Best angle of climb speed (Vx):
60 KIAS (111 km/h) |
| 2. Throttle | - Max. take-off power
- (max. 5800 rpm for 5 minutes)
- Max. cont.power 5500 rpm |
| 3. Trim | - trim the airplane |
| 4. Instruments | - oil temperature and pressure,
coolant temperature within limits |

CAUTION

If coolant or oil temperature approach their limits, reduce the climb angle to increase airspeed and thus fulfill the limits.

4.4.10 Cruise

Avoid operation below normal operation oil temperature 90-110 °C (194-230 °F), as possible formation of condensation water in the lubrication system badly influences the oil quality.

To evaporate possibly accumulated condensation water, at least once a day 212 °F (100 °C) oil temperature must be reached.

- | | |
|------------------|-------|
| 1. Aux fuel pump | - OFF |
|------------------|-------|

Refer to Section 5, for recommended cruising regimes.

4.4.11 Descent

- | | |
|------------------------|-----------------------------|
| 1. Optimum glide speed | - 60–65 KIAS (110-120 km/h) |
|------------------------|-----------------------------|

CAUTION

It is not advisable to reduce the engine throttle control lever to minimum on final approach and when descending from very high altitude. In such cases the engine becomes under-cooled and a loss of power may occur. Descent at increased idle (approx. 3000 rpm), speed between 120-1300 km/h (65-70 KIAS) and check that the engine instruments indicate values within permitted limits.

Aircraft Operating Instructions

4.4.12 Before landing

1. Approach speed - 60 KIAS (110 km/h)
2. Throttle - as needed
3. Electric fuel pump(s) - ON
4. Wing flaps - extend as needed
5. Trim - as needed
6. Autopilot - OFF

4.4.13 Balked Landing (Go around)

1. Throttle - full power (max.5800 rpm)
2. Wing flaps - extend as needed
3. Trim - adjust as needed
4. Wing flaps - retract at height of 150 ft after reaching 65 KIAS (120 km/h)
5. Trim - adjust
6. Repeat circuit pattern and landing

4.4.14 Landing

1. Touch-down on main wheels
2. Apply brakes as needed after the nose wheel touch-down

Aircraft Operating Instructions

4.4.15 Short field landing

1. Fuel selector - select proper tank
2. Safety harness - check that tightened
3. Approach speed - 55 KIAS (100 km/h)
4. Glide path – just enough to clear obstacle at approach end of runway
5. Throttle - as required
6. Electric fuel pump - ON
7. Flaps - 30°
8. Trim - as required
9. Landing light(s) - ON
10. Flare - minimum float
11. After touchdown
 - stick forward
 - Retract flaps
 - Maximum braking

4.4.16 Soft field landing

1. Fuel selector - select proper tank
2. Safety harness - check that tightened
3. Approach speed - 59 KIAS (110 km/h)
4. Throttle - as required
5. Electric fuel pump - ON
6. Flaps - 20 °
7. Trim - as required
8. Landing light(s) - on
9. Flare - add power before touchdown to keep elevator effective to help keep weight off nose wheel
10. After touchdown
 - throttle to idle
 - gradually increase back elevator to keep weight of nosewheel
 - No braking during roll out

4.4.17 After landing

1. Engine speed - set as required for taxiing
2. Wing flaps - retract

Aircraft Operating Instructions

4.4.18 Engine shutdown

Normally the cooling down of the engine during descending and taxiing will be sufficient to allow ECU to be shut off as soon as the aircraft is stopped. At increasing operating temperatures make an engine cooling run of at least minimum 2 minutes.

- | | |
|-----------------------|-----------------|
| 1. Engine instruments | - within limits |
| 2. Engine speed | - idle |
| 3. Avionics | - switch off |
| 4. Ignition LANE B | - switch off |
| 5. Ignition LANE A | - switch off |
| 6. Fuel pumps | - switch off |
| 7. Propeller control | - switch off |
| 8. Circuit breakers | - switch off |
| 9. Master switch | - switch off |

CAUTION

Rapid engine cooling should be avoided during operation. This happens above all during aircraft descent, taxiing, low engine rpm or at engine shutdown immediately after landing.

Under normal conditions the engine temperatures stabilize during descent, taxiing and at values suitable to stop engine by switching the ignition (LANE A,B) off. If necessary, cool the engine at 2500 - 2750 rpm to stabilize the temperatures prior to engine shut down.

Aircraft Operating Instructions

4.4.19 Aircraft parking and tie-down

1. Ignition check - OFF
2. Master switch check - OFF
3. Fuel selector - OFF
4. Parking brake - use it as necessary (if installed)
5. Canopy - close, lock as necessary
6. Secure the airplane

NOTE

It is recommended to use parking brake (if installed) for short-time parking only, between flights during a flight day. After ending the flight day or at low temperatures of ambient air, do not use parking brake, but use the wheel chocks instead.

NOTE

Use anchor eyes on the wings and fuselage rear section to fix the airplane. Move control stick forward and fix it together with the rudder pedals. Make sure that the cockpit canopy is properly closed and locked. The anchoring before leaving the airplane is important if the airplane is not equipped with a parking brake.

4.4.20 Flight in rain

When flying in the rain, no additional steps are required. Aircraft qualities and performance are not substantially changed. However Visual Meteorological Condition (VMC) must be maintained.

Aircraft Operating Instructions

SECTION 5

5 PERFORMANCE

5.1 *Introduction*

5.2 *Performance*

5.2.1 Airspeed indicator system calibration

5.2.2 Stall speeds

5.2.3 Take-off performance

5.2.4 Landing distances

5.2.5 Climb performance

5.2.6 Cruise

5.2.7 Endurance and Range

5.2.8 Demonstrated crosswind performance

5.2.9 Optimum glide speed

5.2.10 Ceiling

Aircraft Operating Instructions

5.1 Introduction

Section 5 provides data for airspeed calibration, stall speeds, take-off performance and additional information.

The presented data has been computed from actual flight tests with the aircraft and engine in good conditions and using average piloting techniques.

If not stated otherwise, the performance stated in this section is valid for maximum take-off weight and under ISA conditions.

The performance shown in this section is valid for aircraft fitted with given power plant.

Aircraft Operating Instructions

5.2 Performance

5.2.1 Airspeed indicator system calibration

	KIAS	KCAS		IAS (km/h)	CAS (km/h)
	35	36		65	66
VS0	37	38	VS0	70	71
	40	41		80	81
VS1	44	45	VS1	82	83
	50	51		90	91
	55	55		100	101
	60	60		110	111
	65	65		120	120
	70	70		130	130
VFE,	75	75	VFE	139	139
	80	80		150	150
	85	85		160	160
	90	90		170	170
VA	96	96	VA	180	179
	100	100		190	189
	105	105		200	199
	110	109		210	209
	115	114		220	219
	120	119		230	229
	125	124	VN0	240	238
VN0	130	129		250	248
	135	134		260	258
	140	139		270	268
	145	144		280	278
	150	149	VNE	290	287
VNE	157	156			

Aircraft Operating Instructions

5.2.2 Stall speeds

Conditions: Max.takeoff-off weight 600 kg Engine idle run	Wing flaps pos.	KIAS	KCAS	IAS [km/h]	CAS [km/h]	Altitude loss at recovery [ft]
Wing level stall	0°	44	45	82	83	100
	20°	42	43	78	79	120
	30°	37	38	70	71	160
Co-ordinated turn 30° bank	0°	47	48	88	89	120
	20°	45	46	84	85	160
	30°	40	41	75	76	200

Aircraft Operating Instructions

5.2.3 Take-off performance

ISA Conditions			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	15,0	59	660	1500	920	1760
2000 ft ISA	11,0	52	740	1690	1040	1980
4000 ft ISA	7,1	45	840	1900	1170	2230
6000 ft ISA	3,1	38	940	2150	1320	2520
8000 ft ISA	-0,8	30	1070	2430	1490	2850
10000 ft ISA	-4,8	23	1210	2750	1690	3230

ISA + 10 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	25,0	77	710	1610	980	1880
2000 ft ISA	21,0	70	800	1810	1110	2120
4000 ft ISA	17,1	63	900	2040	1250	2390
6000 ft ISA	13,1	56	1010	2310	1410	2710
8000 ft ISA	9,2	48	1150	2610	1600	3060
10000 ft ISA	5,2	41	1300	2960	1820	3470

ISA + 20 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	35,0	95	750	1720	1050	2010
2000 ft ISA	31,0	88	850	1930	1190	2270
4000 ft ISA	27,1	81	960	2180	1340	2560
6000 ft ISA	23,1	74	1090	2470	1510	2900
8000 ft ISA	19,2	66	1230	2800	1720	3280
10000 ft ISA	15,2	59	1400	3180	1950	3730

ISA -10 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	5,0	41	610	1400	860	1640
2000 ft ISA	1,0	34	690	1570	960	1840
4000 ft ISA	-2,9	27	780	1770	1080	2080
6000 ft ISA	-6,9	20	880	1990	1220	2340
8000 ft ISA	-10,8	12	990	2250	1380	2640
10000 ft ISA	-14,8	5	1120	2550	1560	2990

ISA -20 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]	Takeoff Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	-5,0	23	570	1300	800	1520
2000 ft ISA	-9,0	16	640	1460	890	1710
4000 ft ISA	-12,9	9	720	1640	1010	1920
6000 ft ISA	-16,9	2	810	1850	1130	2170
8000 ft ISA	-20,8	-6	920	2080	1280	2450
10000 ft ISA	-24,8	-13	1040	2360	1450	2760

Aircraft Operating Instructions

5.2.4 Landing distances

ISA Conditions			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Landing Run [ft]	Distance over 50 ft obstacle [ft]	Landing Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	15,0	59	300	950	360	1020
2000 ft ISA	11,0	52	320	1010	380	1080
4000 ft ISA	7,1	45	340	1070	410	1150
6000 ft ISA	3,1	38	360	1140	430	1220
8000 ft ISA	-0,8	30	380	1210	460	1300
10000 ft ISA	-4,8	23	410	1290	490	1380

ISA + 10 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Landing Run [ft]	Distance over 50 ft obstacle [ft]	Landing Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	25,0	77	310	980	370	1060
2000 ft ISA	21,0	70	330	1040	400	1120
4000 ft ISA	17,1	63	350	1110	420	1190
6000 ft ISA	13,1	56	370	1180	450	1260
8000 ft ISA	9,2	48	400	1250	470	1350
10000 ft ISA	5,2	41	420	1330	510	1430

ISA + 20 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Landing Run [ft]	Distance over 50 ft obstacle [ft]	Landing Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	35,0	95	320	1020	390	1090
2000 ft ISA	31,0	88	340	1080	410	1160
4000 ft ISA	27,1	81	360	1150	430	1230
6000 ft ISA	23,1	74	380	1220	460	1310
8000 ft ISA	19,2	66	410	1300	490	1390
10000 ft ISA	15,2	59	440	1380	520	1480

ISA -10 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Landing Run [ft]	Distance over 50 ft obstacle [ft]	Landing Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	5,0	41	290	920	350	980
2000 ft ISA	1,0	34	310	970	370	1040
4000 ft ISA	-2,9	27	330	1030	390	1110
6000 ft ISA	-6,9	20	350	1100	420	1180
8000 ft ISA	-10,8	12	370	1160	440	1250
10000 ft ISA	-14,8	5	390	1240	470	1330

ISA -20 °C			CONCRETE		GRASS	
Airport altitude H [ft]	Temperature tH [°C]	Temperature tH [°F]	Landing Run [ft]	Distance over 50 ft obstacle [ft]	Landing Run [ft]	Distance over 50 ft obstacle [ft]
0 ft ISA	-5,0	23	280	880	340	950
2000 ft ISA	-9,0	16	300	940	350	1010
4000 ft ISA	-12,9	9	310	990	380	1070
6000 ft ISA	-16,9	2	330	1050	400	1130
8000 ft ISA	-20,8	-6	350	1120	420	1200
10000 ft ISA	-24,8	-13	380	1190	450	1280

Aircraft Operating Instructions

5.2.5 Climb performance

Conditions: <i>Maximum takeoff power</i> <i>MTOW 1320 lb</i> <i>(600 kg)</i>	Climbing speed Vy for best rate of climb		Rate of climb	Climbing speed Vx for best angle of climb		Rate of climb
	<i>KIAS</i>	<i>IAS [km/h]</i>	<i>[fpm]</i>	<i>KIAS</i>	<i>IAS [km/h]</i>	<i>[fpm]</i>
0 ft ISA	72	133	930	60	111	840
2000 ft ISA	71	132	810	60	110	740
4000 ft ISA	70	130	700	59	109	640
6000 ft ISA	69	127	590	58	107	540
8000 ft ISA	67	124	480	57	105	450
10000 ft ISA	65	120	380	55	103	350

Aircraft Operating Instructions

5.2.6 Cruise

		50%	65%	75%	MCP
		4300 rpm	4800 rpm	5000 rpm	5500 rpm
0 ft	CIAS	84 knots	96 knots	101 knots	112 knots
	KCAS	86 knots	97 knots	102 knots	113 knots
	KTAS	86 knots	97 knots	102 knots	113 knots
2000 ft	CIAS	79 knots	91 knots	96 knots	107 knots
	KCAS	81 knots	92 knots	97 knots	108 knots
	KTAS	83 knots	95 knots	100 knots	112 knots
4000 ft	CIAS	74 knots	86 knots	91 knots	103 knots
	KCAS	76 knots	88 knots	92 knots	104 knots
	KTAS	81 knots	93 knots	98 knots	110 knots
6000 ft	CIAS	69 knots	81 knots	86 knots	98 knots
	KCAS	71 knots	83 knots	87 knots	99 knots
	KTAS	78 knots	91 knots	96 knots	108 knots
8000 ft	CIAS	65 knots	76 knots	81 knots	93 knots
	KCAS	66 knots	78 knots	83 knots	94 knots
	KTAS	75 knots	88 knots	93 knots	106 knots
10000 ft	CIAS	60 knots	72 knots	76 knots	88 knots
	KCAS	62 knots	73 knots	78 knots	90 knots
	KTAS	72 knots	85 knots	91 knots	104 knots

Aircraft Operating Instructions

5.2.7 Endurance and Range

The table below shows fuel consumption, endurance and range

Fuel qty. = **31,7 US gal**

Unusable fuel = **0,3 US gal**

NO FUEL RESERVE CONSIDERED !

		50%	65%	75%	MCP
		4300 rpm	4800 rpm	5000 rpm	5500 rpm
0 ft	KIAS	84 knots	96 knots	101 knots	112 knots
	KCAS	86 knots	97 knots	102 knots	113 knots
	KTAS	86 knots	97 knots	102 knots	113 knots
	Fuel consumption	2,2 USgal/h	3,4 USgal/h	4,0 USgal/h	5,5 USgal/h
	Endurance	14:02	9:07	7:53	5:44
2000 ft	Range	1200 NM	890 NM	800 NM	650 NM
	KIAS	79 knots	91 knots	96 knots	107 knots
	KCAS	81 knots	92 knots	97 knots	108 knots
	KTAS	83 knots	95 knots	100 knots	112 knots
	Fuel consumption	2,2 USgal/h	3,3 USgal/h	3,8 USgal/h	5,2 USgal/h
4000 ft	Endurance	13:58	9:23	8:11	6:04
	Range	1160 NM	890 NM	820 NM	680 NM
	KIAS	74 knots	86 knots	91 knots	103 knots
	KCAS	76 knots	88 knots	92 knots	104 knots
	KTAS	81 knots	93 knots	98 knots	110 knots
6000 ft	Fuel consumption	2,3 USgal/h	3,3 USgal/h	3,7 USgal/h	4,9 USgal/h
	Endurance	13:54	9:40	8:31	6:25
	Range	1120 NM	900 NM	830 NM	710 NM
	KIAS	69 knots	81 knots	86 knots	98 knots
	KCAS	71 knots	83 knots	87 knots	99 knots
8000 ft	KTAS	78 knots	91 knots	96 knots	108 knots
	Fuel consumption	2,3 USgal/h	3,2 USgal/h	3,5 USgal/h	4,6 USgal/h
	Endurance	13:50	9:58	8:52	6:50
	Range	1080 NM	900 NM	850 NM	740 NM
	KIAS	65 knots	76 knots	81 knots	93 knots
10000 ft	KCAS	66 knots	78 knots	83 knots	94 knots
	KTAS	75 knots	88 knots	93 knots	106 knots
	Fuel consumption	2,3 USgal/h	3,1 USgal/h	3,4 USgal/h	4,3 USgal/h
	Endurance	13:46	10:17	9:16	7:17
	Range	1030 NM	910 NM	860 NM	780 NM
	KIAS	60 knots	72 knots	76 knots	88 knots
	KCAS	62 knots	73 knots	78 knots	90 knots
	KTAS	72 knots	85 knots	91 knots	104 knots
	Fuel consumption	2,3 USgal/h	3,0 USgal/h	3,2 USgal/h	4,0 USgal/h
	Endurance	13:42	10:38	9:41	7:49
	Range	980 NM	910 NM	880 NM	820 NM

Aircraft Operating Instructions

5.2.8 Demonstrated crosswind performance

Max. permitted head wind velocity for take-off and landing	30	knots	15	m/s
Max. permitted cross wind velocity for take-off and landing	16	knots	8	m/s

5.2.9 Optimum glide speed

Optimum glide speed.....	60-65	KIAS	110-120	km/h
--------------------------	-------	------	---------	------

5.2.10 Ceiling

Service ceiling.....	15.100	ft	4600	m
----------------------	--------	----	------	---

Aircraft Operating Instructions

SECTION 6

6 WEIGHT AND BALANCE

6.1 *Introduction*

6.2 *Weight and Balance Record*

6.2.1 *Weight and Balance Report*

6.2.1.1 Empty Aircraft Weight and CG

6.2.1.2 Loaded Aircraft Weight and CG

6.2.1.3 Weight and CG Blank Form

6.3 *Permitted payload range*

6.4 *Operational Weight and Balance Computation*

6.4.1 Airplane Loading Schedule Chart

6.4.2 Table of static moments

6.4.3 Airplane loading graph

6.4.4 CG Moment envelope

6.4.5 CG limits

6.5 *Equipment list*

Aircraft Operating Instructions

6.1 Introduction


This section contains the payload range within which the BRISTELL LSA may be safely operated.

Procedures for weighing the aircraft and the calculation method for establishing the permitted payload range are contained in last revision of FAA Aviation Advisory Circular AC.43.13 – 1B.

Aircraft Operating Instructions

6.2.1 Weight and Balance Report

6.2.1.1 Empty Aircraft Weight and CG

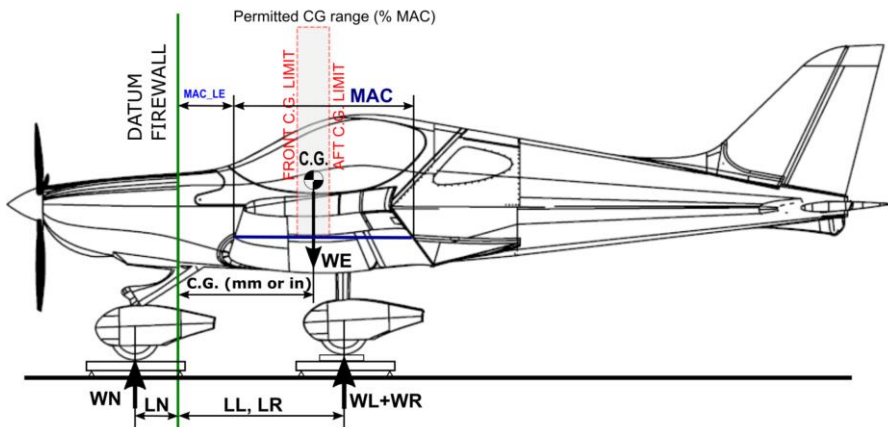

1. Empty Aircraft Weight and CG

Registration:

N437BL

MAC_LE (mm):

15,988

MAC (in):

54,114

EMPTY AIRCRAFT WEIGHT AND CG	ITEM	WEIGHT (lb)	ARM (in)	MOMENT = WEIGHT x ARM (lb.in)
	RIGHT MAIN WHEEL	WR= 310	LR= 43,6	MR= 13506,9
	LEFT MAIN WHEEL	WL= 317	LL= 43,6	ML= 13843,4
	NOSE WHEEL	WN= 164	LN= -14,5	MN= -2388,6
	EMPTY AIRCRAFT	EMPTY WEIGHT (lbs) WE= 791,5	CG (in) = 31,54 CG (%MAC) = 28,7	EMPTY ACFT TOTAL MOMENT (lbs.in) MT= 24961,62

$CG (in) = \text{TOTAL MOMENT} / \text{TOTAL WEIGHT}$

$CG (\%MAC) = (CG (in) - MAC_LE) \times 100 / MAC$

Serial No.: 437/2019

Date: 17.9.2020

By: BRM Aero

Aircraft Operating Instructions

6.2.1.2 Loaded Aircraft Weight and CG

LOADED AIRCRAFT WEIGHT AND CG	ITEM	WEIGHT (lb)	ARM (in)	MOMENT = WEIGHT x ARM (lb.in)
	EMPTY AIRCRAFT	791,5	31,54	24961,6
	PILOT		45,5	
	PASSENGER		45,5	
	BAGGAGE - BEHIND SEATS		71,1	
	BAGGAGE - WING LOCKERS		40,8	
	FUEL TANKS		23,9	
	LOADED AIRCRAFT	TAKEOFF WEIGHT (lbs) TOW=	CENTER OF GRAVITY CG (in)= CG (%MAC) =	LOADED ACFT TOTAL MOMENT (lb.in) MT=

Max. Takeoff Weight: **1320** lb
 CG Range: **25** **35**
 Front C.G. limit (behind Datum): **29,5** in
 Aft C.G. limit (behind Datum): **34,9** in

CG (in)= TOTAL MOMENT / TOTAL WEIGHT
 CG (%MAC)= (CG (in) - MAC_LE) X 100 / MAC

Serial No.: 437/2019
Date:
By:

Aircraft Operating Instructions

6.2.1.3 Weight and CG Blank Form

EMPTY AIRCRAFT WEIGHT AND CG	ITEM	WEIGHT (lb)	ARM (in)	MOMENT = WEIGHT x ARM (lb.in)
	RIGHT MAIN WHEEL	WR=	LR= 43,6	MR=
	LEFT MAIN WHEEL	WL=	LL= 43,6	ML=
	NOSE WHEEL	WN=	LN= -14,5	MN=
	EMPTY AIRCRAFT	EMPTY WEIGHT (lbs) WE=	CG (in) = CG (%MAC) =	EMPTY ACFT TOTAL MOMENT (lbs.in) MT=

LOADED AIRCRAFT WEIGHT AND CG	ITEM	WEIGHT (lb)	ARM (in)	MOMENT = WEIGHT x ARM (lb.in)
	EMPTY AIRCRAFT			
	PILOT		45,5	
	PASSENGER		45,5	
	BAGGAGE - BEHIND SEATS		71,1	
	BAGGAGE - WING LOCKERS		40,8	
	FUEL TANKS		23,9	
	LOADED AIRCRAFT	TAKEOFF WEIGHT (lbs) TOW=	CENTER OF GRAVITY CG (in)= CG (%MAC) =	LOADED ACFT TOTAL MOMENT (lb.in) MT=

Max.Takeoff Weight: **1320** lb
 CG Range: **25** **35**
 Front C.G. limit (behind Datum): **29,5** in
 Aft C.G. limit (behind Datum): **34,9** in

CG (in)= TOTAL MOMENT / TOTAL WEIGHT

CG (%MAC)= (CG (in) - MAC_LE) X 100 / MAC

Serial No.: 437/2019

Date:

By:

Max.useful load:

WU (lb) = MTOW - WE

WU (lb) = **1320** -

WU (lb) =

WARNING

DO NOT EXCEED MAXIMUM TAKEOFF WEIGHT!

Aircraft Operating Instructions

6.3 Permitted payload range

PERMITTED PAYLOAD RANGE OF BRISTELL (lb)									
S/N:	437/2019	Empty weight (lb): 791					MTOW (lb): 1320,0		
F U E L									
	VOLUME	(US gal)	5,0	10,0	15,0	20,0	25,0	30,0	31,7
	WEIGHT	(lb)	30,3	60,5	90,8	121,0	151,3	181,5	191,8
PERMITTED CREW WEIGHT (lb)									
B A G G A G E (lb)	NO BAGGAGE	0	285 <small>35,0 %MAC</small>	317 <small>35,0 %MAC</small>	348 <small>35,0 %MAC</small>	380 <small>35,0 %MAC</small>	377 <small>34,5 %MAC</small>	347 <small>33,6 %MAC</small>	337 <small>33,3 %MAC</small>
	1/2 REAR	17	229 <small>35,0 %MAC</small>	260 <small>35,0 %MAC</small>	292 <small>35,0 %MAC</small>	323 <small>35,0 %MAC</small>	355 <small>35,0 %MAC</small>	331 <small>34,2 %MAC</small>	320 <small>33,9 %MAC</small>
	MAX REAR	33	172 <small>35,0 %MAC</small>	204 <small>35,0 %MAC</small>	235 <small>35,0 %MAC</small>	267 <small>35,0 %MAC</small>	299 <small>35,0 %MAC</small>	314 <small>34,8 %MAC</small>	304 <small>34,4 %MAC</small>
	1/2 WING LOCKERS	44	261 <small>35,0 %MAC</small>	292 <small>35,0 %MAC</small>	324 <small>35,0 %MAC</small>	356 <small>35,0 %MAC</small>	333 <small>34,2 %MAC</small>	303 <small>33,3 %MAC</small>	293 <small>33,0 %MAC</small>
	1/2 REAR + 1/2 WING	61	204 <small>35,0 %MAC</small>	236 <small>35,0 %MAC</small>	267 <small>35,0 %MAC</small>	299 <small>35,0 %MAC</small>	317 <small>34,8 %MAC</small>	286 <small>33,9 %MAC</small>	276 <small>33,6 %MAC</small>
	MAX REAR + 1/2 WING	77	148 <small>35,0 %MAC</small>	179 <small>35,0 %MAC</small>	211 <small>35,0 %MAC</small>	243 <small>35,0 %MAC</small>	274 <small>35,0 %MAC</small>	270 <small>34,5 %MAC</small>	260 <small>34,2 %MAC</small>
	MAX WING LOCKERS	88	236 <small>35,0 %MAC</small>	268 <small>35,0 %MAC</small>	300 <small>35,0 %MAC</small>	319 <small>34,8 %MAC</small>	289 <small>33,9 %MAC</small>	259 <small>33,0 %MAC</small>	249 <small>32,7 %MAC</small>
	1/2 REAR + MAX WING	105	180 <small>35,0 %MAC</small>	211 <small>35,0 %MAC</small>	243 <small>35,0 %MAC</small>	275 <small>35,0 %MAC</small>	273 <small>34,5 %MAC</small>	242 <small>33,6 %MAC</small>	232 <small>33,3 %MAC</small>
	MAX REAR + WING	121	123 <small>35,0 %MAC</small>	155 <small>35,0 %MAC</small>	187 <small>35,0 %MAC</small>	218 <small>35,0 %MAC</small>	250 <small>35,0 %MAC</small>	226 <small>34,2 %MAC</small>	215 <small>33,9 %MAC</small>

Permitted crew weight with regard to CG limits.

“X” (if present) means computed crew weight less than minimum crew weight

Aircraft Operating Instructions

6.4 Operational Weight and Balance Computation

An important part of preflight planning is to determine that the aircraft is loaded so its weight and CG location are within the allowable limits.

This is possible by using hereafter explained Loading graph method, using weights, arms, and moment indexes.

Procedure:

1. Record into the 6.4.1 Airplane Loading Schedule Chart current empty weight and static moment of the airplane, which you read from 6.2 Weight and Balance Record.
2. Record the weight of crew, fuel, and baggage into 6.4.1 Airplane Loading Schedule Chart.
3. See the 6.4.2 Table of static moments or 6.4.3 Airplane loading graph to read static moments for given weights of crew, fuel, and baggage.
4. Record found moments into the 6.4.1 Airplane Loading Schedule Chart.
5. Determine Take-off weight of the airplane – add together the airplane empty weight, crew, fuel, and baggage and record the result into the 6.4.1 Airplane Loading Schedule Chart.
6. Check, whether the calculated Take-off weight does not exceed Airplane Maximum Take-off Weight 1320 lb, 600 kg.
If yes, then it is necessary to reduce weight of some of the useful load items (fuel, baggage).

WARNING

**EXCEEDING MTOW MAY LEAD TO DETERIORATION
OF SAFETY OF FLIGHT!**

7. Determine Total Static Moment of loaded airplane – add together the static moment of empty airplane, crew, fuel, and baggage and record the result into the 6.4.1 Airplane Loading Schedule Chart.
8. Plot Takeoff Weight and Total Static Moment into the 6.4.4 CG Moment envelope.
9. Check, whether the intersection of Take-off weight horizontal line and Total Static Moment vertical line is inside the envelope.
If **YES**, then the flight may be safely performed as regards weight and

Aircraft Operating Instructions

balance.

If **NOT**, then it is necessary to change weight of some of the useful load items (crew, fuel, baggage) so that after a repeated computation the intersection of Take-off Weight and Total Static Moment will be inside the CG Moment envelope.

WARNING

SAFETY OF FLIGHT PERFORMED WITH THE AIRPLANE LOADED
OUTSIDE PERMITTED LIMITS OF WEIGHT AND STATIC MOMENTS
MAY BE DETERIORATED!

Aircraft Operating Instructions

6.4.1 Airplane Loading Schedule Chart

Aircraft Type/Model:	BRISTELL LSA	Airplane S/N:	437/2019	Registration:	N437BL
----------------------	--------------	---------------	----------	---------------	--------

LOADING SCHEDULE CHART			SAMPLE AIRCRAFT			YOUR AIRCRAFT 437/2019		
#	ITEM	WEIGHT LIMIT [lb]	WEIGHT [lb]	ARM [in]	MOMENT/100 [lb.in]	WEIGHT [lb]	ARM [in]	MOMENT/100 [lb.in]
1.	Empty aeroplane		832,2	28,8	239,8	791,5	31,54	249,62
2.	Crew		198,4	45,5	90,3		45,5	
3.	Fuel	190,5	127,0	23,9	30,3		23,9	
4.	Baggage behind seats	33,1	33,1	71,1	23,5		71,1	
5.	Baggage wing lockers	88,2	88,2	40,8	36,0		40,8	
		MTOW [lb]	TAKEOFF WEIGHT [lb] = sum of weights 1 to 6		TOTAL MOMENT/100 [lb.in] = sum of moments 1 to 6	TAKEOFF WEIGHT [lb] = sum of weights 1 to 6		TOTAL MOMENT/100 [lb.in] = sum of moments 1 to 6
		1320	1278,9		419,9			
	FRONT CG LIMIT 29,52 in AFT CG LIMIT 34,93 in	CG POSITION $\frac{\text{TOTAL MOMENT/100} \times 100}{\text{TAKEOFF WEIGHT}}$ [in] = $\frac{41987,3}{1278,9}$ = 32,831				CG POSITION $\frac{\text{TOTAL MOMENT/100} \times 100}{\text{TAKEOFF WEIGHT}}$ [in] = $\frac{\quad}{\quad}$ = $\frac{\quad}{\quad}$		
	FRONT CG LIMIT 25,0 %MAC AFT CG LIMIT 35,0 %MAC	CG POSITION $\frac{(\text{CG POS. [in]} - \text{MAC_LE}) \times 100}{\text{\%MAC}}$ [in] = $\frac{1684,3}{54,1}$ = 31,1				CG POSITION $\frac{(\text{CG POS. [in]} - \text{MAC_LE}) \times 100}{\text{\%MAC}}$ [in] = $\frac{\quad}{\quad}$ = $\frac{\quad}{\quad}$		
						MAC [in]= 54,114 MAC_LE [in]= 15,988		


Aircraft Operating Instructions

6.4.2 Table of static moments

CREW			FUEL			BAGGAGE BEHIND SEATS			BAGGAGE WING LOCKERS		
Weight [lb]	Moment/100 [lb.in]		Quantity [US gal]	Weight [lb]	Moment/100 [lb.in]	Weight [lb]	Moment/100 [lb.in]		Weight [lb]	Moment/100 [lb.in]	
0.0	0.0		0.0	0.0	0.0	0	0.0		0	0.0	
121.0	55.1		2.0	12.0	2.9	2	1.4		5	2.0	
140.0	63.7		4.0	24.0	5.7	4	2.8		10	4.1	
160.0	72.8		6.0	36.1	8.6	6	4.3		15	6.1	
180.0	81.9		8.0	48.1	11.5	8	5.7		20	8.2	
200.0	91.0		10.0	60.1	14.3	10	7.1		25	10.2	
220.0	100.1		12.0	72.1	17.2	12	8.5		30	12.2	
240.0	109.2		14.0	84.1	20.1	14	10.0		35	14.3	
260.0	118.3		16.0	96.1	22.9	16	11.4		40	16.3	
280.0	127.4		18.0	108.2	25.8	18	12.8		45	18.4	
300.0	136.5		20.0	120.2	28.7	20	14.2		50	20.4	
320.0	145.6		22.0	132.2	31.5	22	15.6		55	22.4	
340.0	154.7		24.0	144.2	34.4	24	17.1		60	24.5	
360.0	163.8		26.0	156.2	37.3	26	18.5		65	26.5	
380.0	172.9		28.0	168.2	40.1	28	19.9		70	28.6	
400.0	182.0		30.0	180.3	43.0	30	21.3		75	30.6	
420.0	191.1		32.0	192.3	45.9	32	22.8		80	32.6	
440.0	200.3					33	23.5		85	34.7	
460.0	209.4								90	36.7	
480.0	218.5										
500.0	227.6										
520.0	236.7										


Aircraft Operating Instructions

6.4.3 Airplane loading graph

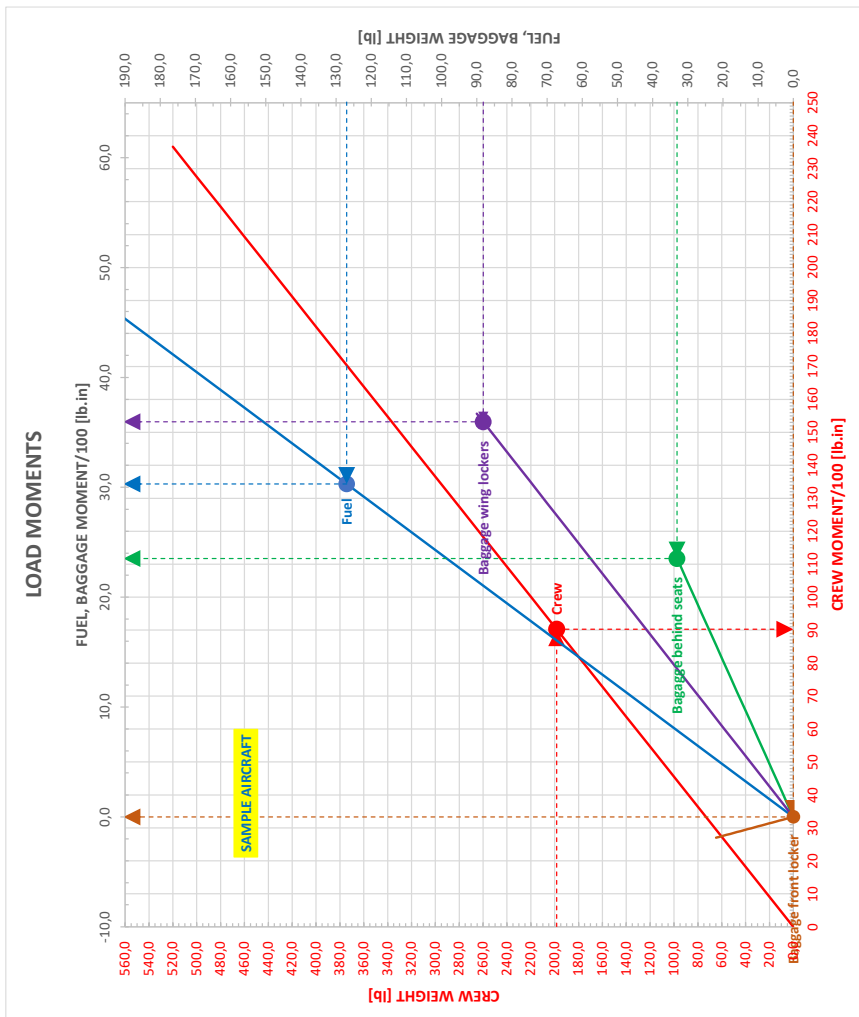


Aircraft Operating Instructions

6.4.4 CG Moment envelope

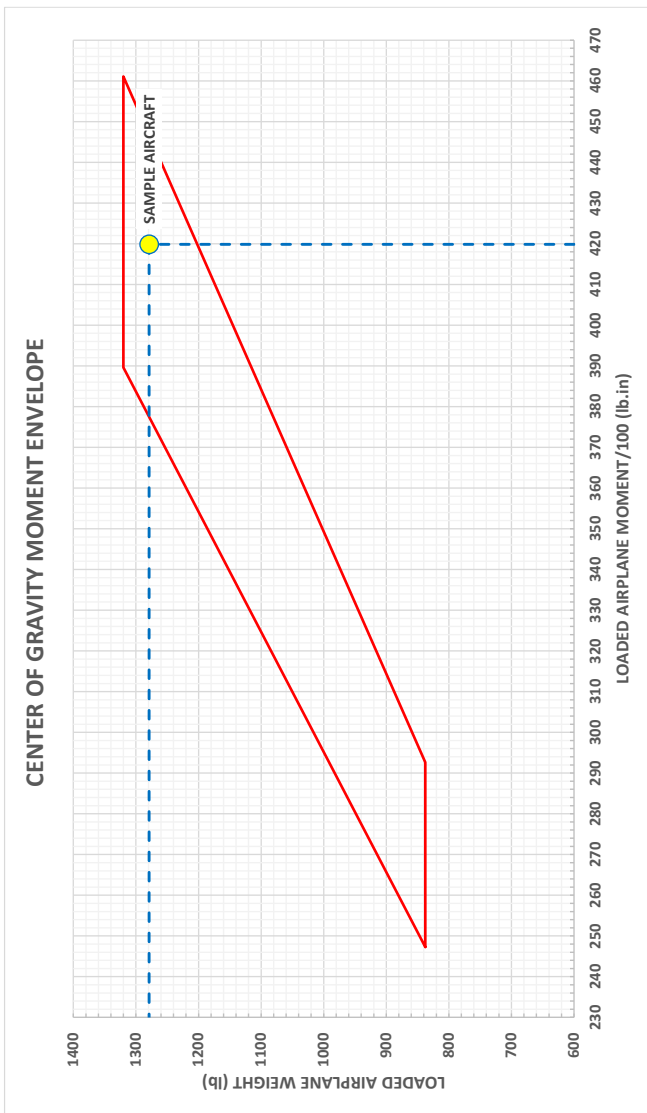

Aircraft Operating Instructions

6.4.5 CG limits

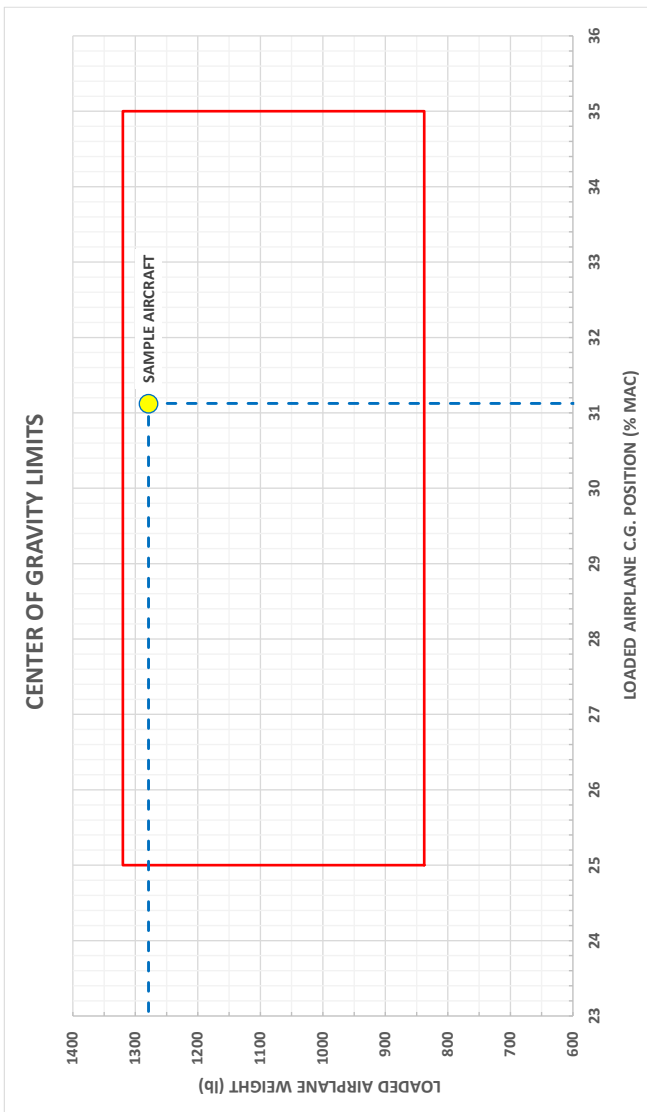

Aircraft Operating Instructions

6.5 Equipment list

List of equipment installed in BRISTELL LSA, S/N 437/2019:

1. 3-pos.adjustable rudder pedals on both sides
2. additional 12V/5V socket on instrument panel
3. AirGizmos PD-22 bracket for Garmin 795 GPS
4. AMSAFE 4-point safety belts
5. Anderson plug-External connection to power for jump start
1. Arm rest box, 2 map pockets
2. Automotive net in baggage compartment (P/N 42084)
3. Back-up ALT Winter 4 FGH 40, 0-1000-20000 ft, inHg
4. Back-up ASI Winter 7FMS 513 (0-160 kts)
5. Beringer 5,00-5 wheels + wheel pants
6. Beringer hand brake on central console, brake limiter
7. BOSCH M6 023 12V 18 AH YTX20L-4 battery
8. Bracket for EARTH X battery installation
9. Cabin heat
10. Canopy glass grey
11. Carpets in the cockpit
12. Central console rear CARBON with valve
13. Central console front CARBON without valve
14. Elevator electric trim
15. ELT Kannad AF Integra 406 MHz + RC 200 control unit
16. Fiti 3LR 158, 3-bladed, ground adjustable propeller
17. Fixed landing gear, steerable nose wheel
18. Fuel selector on console between seats
19. GARMIN AERA 795 GPS
20. Garmin G3X flight display system
21. Garmin GA 26C GPS antenna for G3X
22. Garmin GA 57X combo GPS / XM antenna for G3X
23. Garmin GAP 26 angle of attack heated probe
24. Garmin GDL 51R Remote-mount SiriusXM® Receiver
25. Garmin GDU 465 display unit
26. Garmin GEA 24 Engine Interface Module

Aircraft Operating Instructions

27. Garmin GMU 22 Magnetometer
 28. Garmin GPS 20A ADS-B Receiver
 29. Garmin GSA 28 autopilot servos installation (roll+pitch)
 30. Garmin GSU 25 ADHRS (1x)
 31. Garmin GTP 59 Temperature Probe
 32. Garmin GTR 20 remote-mount com radio
 33. Garmin GTX 45R mode S transponder with ADS-B out
 34. Grey interior RAL 7016
 35. LAMBERT ARROW FLASH 2 wing tip lights + fin beacon
 36. Lambert Flaps V4_0 LED light +LINAK electric flaps actuator
 37. Landing lights in both wings, WIG-WAG
 38. Large square eye-ball vents 3275
 39. Leather glareshield, middle size
 40. LED strip on glareshield + dimmer
 41. LEMO Connector with power supply
 42. Lockable canopy, Lockable fuel tank caps
 43. Long HTU (2.9 m) with long trim and horn balance
 44. Middle size instrument panel for G3X CARBON
 45. Noise insulation on firewall
 46. Nose gear doubled flexible rod (Teleflex)
 47. Paint scheme: #13 - white
 48. RAMI AV-10 comm antenna, AV-74 transponder DME antenna
 49. RAMI AV-525 VOR, LOC & GS „V“ Dipole Antenna
 50. Red Loctite to seal exhaust system spring connection
 51. Rotax 912 iS Sport engine
 52. Seats padded textile
 53. SHILTEK LG fire sleeves on the oil hoses
 54. Short control sticks for Tosten CS-6 grips
 55. TCW IBBS-12V-3AH backup battery for Garmin G3X
 56. USB port(s) on the instrument panel
 57. Wing lockers
 58. Winter QM 2 Art. 1120 bank indicator
- .

Aircraft Operating Instructions

SECTION 7

7 AIRPLANE AND SYSTEMS DESCRIPTION

7.1 *Introduction*

7.2 *Airframe*

7.3 *Control system*

7.4 *Landing gear*

7.5 *Seats and safety harness*

7.6 *Baggage compartment*

7.7 *Canopy*

7.8 *Power plant*

7.8.1 Throttle

7.8.2 Heating

7.9 *Fuel system*

7.10 *Electrical system*

7.10.1 Battery

7.10.2 Master switch

7.10.3 Lane Switches

7.10.4 Start Power Switch

7.10.5 Battery Backup Switch

7.10.6 Start Button

7.11 *Pitot and static pressure system*

7.12 *Miscellaneous equipment*

7.13 *Instruments and Avionics*

7.14 *Cockpit*

7.14.1 Cockpit layout

7.14.2 Instrument panel

Aircraft Operating Instructions

7.1 Introduction

This section provides description and operation of the aircraft and its systems.

7.2 Airframe

All-metal construction, single curvature metal skins riveted to stiffeners. Construction is of 6061-T6 aluminum sheet metal riveted to aluminum angles with Avex rivets. This high strength aluminum alloy construction provides long life and low maintenance costs thanks to its durability and corrosion resistance characteristics.

The wing has a high lift airfoil equipped by fowler flaps controlled by the electric servo operated by the pilot.

7.3 Control system

The plane is equipped with a dual stick control and classic rudder pedals, with pedal hydraulic brakes for easy ground control.

The elevator and aileron trim control, as well as wing flaps are electrically operated from the rocker switches located on the instrument panel or on the control stick.

Aircraft Operating Instructions

7.4 Landing gear

Tricycle landing gear with the steerable nose wheel. Main landing gear uses two fiberglass spring elements.

7.5 Seats and safety harness

Side-by-side seating. Seat cushions are removable to make easier cleaning and drying. Four point safety belts provided to each seat. Optional, is additional seat upholstery to raise the small pilot or move him forward.

NOTE

Prior to each flight, ensure that the seat belts are firmly secured to the airframe, and that the belts are not damaged. Adjust the buckle so that it is centered on the body.

7.6 Baggage compartment

The rear baggage compartment is located behind the seats. It may accommodate up to 33 lb (15 kg). This space is divide on two sections – baggage compartment A and B. Is not recommended give too heavy things into baggage compartment B.

The baggage may also be loaded into the baggage compartment inside each wing up to 44 lb (20 kg), in each wing locker.

Make sure that baggage does not exceed maximum allowable weight, and that the aircraft CG is within limits with loaded baggage.

All baggage must be properly secured.

7.7 Canopy

Access to the cabin is from both sides. Make sure that the canopy is latched and mechanism is securely locked into position on both sides before operating the aircraft.

Aircraft Operating Instructions

7.8 Power plant

Engine:

Rotax 912 iS SPORT is 4-stroke, 4 cylinder, horizontally opposed, spark ignition engine with one central camshaft-push-rod-OHV. Liquid cooled cylinder heads, ram air cooled cylinders.

Dry sump forced lubrication. Dual contactless capacitor discharge ignition. The engine is fitted with an electric starter, AC generator and electrical fuel pumps. Prop drive via reduction gear with integrated shock absorber.

Propeller:

FITI Eco Competition 3LR 158 is on-ground adjustable, 3-bladed propeller with composite blades.

NOTE

For technical data refer to documentation supplied by the propeller manufacturer.

7.8.1 Throttle

Engine power is controlled by means of the THROTTLE lever. THROTTLE lever is positioned in the middle channel between the seats. Lever is mechanically connected (by cables) to the flaps on the carburetors. Spring is added to the throttle push rod to ensure that the engine will go to full power if the linkages fail.

7.8.2 Heating

Heating consists of a heat exchanger on the exhaust manifold and control mechanism located on the right hand side of instrument panel.

CAUTION

Incidents involving exhaust gases entering the heating or ventilation system may result in fatal accidents due to carbon monoxide poisoning of the aircraft occupants. A carbon monoxide detector is recommended.

Aircraft Operating Instructions

7.9 Fuel system

Wing tanks volume: 2x16 US gallons (2x60 l)

Each tank is equipped with a vent outlet and screen filter.

Drain valve located in the lowest point of the each tank and on the bottom edge of the firewall, on the gascolator.

Main fuel selector valve is on the central console in the cockpit.

The electric fuel pump is located on firewall.

CAUTION

Do not overfill the tanks to avoid fuel overflow through venting tubes.

7.10 Electrical system

7.10.1 Battery

The battery is mounted on the forward side of the firewall.

7.10.2 Master switch

Master switch connects the electrical system to the 12 Volt battery and charger/coils, controlled by the regulator. See Engine Manual for electrical system details.

NOTE

Ignition system is independent on the power source and will operate even with Master switch and/or breaker off.

7.10.3 Lane Switches

There are installed two independent LANE select switches A and B on the instrument panel to connect the engine control unit ECU for the relevant LANE to the EMS power supply. The switches are used for LANE and ignition check after engine starting. LANE A and LANE B have different sensor inputs. During LANE and Ignition Check, some sensors values are not displayed, depending on activation of the LANES. Refer to Engine Operator's Manual for more details.

NOTE

All switches and or engine controls are "up" or "push forward" for operation, except the cabin heat which is "Pull" for "on". Optional equipment, switches and/or fuses are subject to change or installed as requested. See Aircraft Equipment List and Photo and Description of equipment and controls in the cockpit.

Aircraft Operating Instructions

7.10.4 Start Power Switch

By pressing the Start Power Switch, the EMS system of the engine is powered externally by the onboard battery for a short time during start-up.

7.10.5 Battery Backup Switch

If necessary (e.g. in case of supply failure by the internal generator) the EMS system can be powered by the onboard battery by activating the Battery Backup Switch.

7.10.6 Start Button

The Red Start Button on the instrument panel activates the starter motor.

7.11 Pitot and static pressure system

Pitot tube (optionally heated) is located below the right wing. Pressure distribution to the instruments is through flexible plastic hoses.

Static ports are located on both sides of the fuselage at the tail.

Keep the Pitot tube and static ports clean to ensure proper function of the system.

Aircraft Operating Instructions

7.12 Miscellaneous equipment

BRISTELL LSA, S/N 437/2019 is fitted with

1. 3-pos.adjustable rudder pedals on both sides
2. additional 12V/5V socket on instrument panel
3. AMSAFE 4-point safety belts
4. Anderson plug-External connection to power for jump start
5. Arm rest box, 2 map pockets
6. Automotive net in baggage compartment (P/N 42084)
7. Beringer 5,00-5 wheels + wheel pants
8. Beringer hand brake on central console, brake limiter
9. BOSCH M6 023 12V 18 AH YTX20L-4 battery
10. Cabin heat, Carpets in the cockpit
11. Canopy glass grey
12. Elevator electric trim
13. Fixed landing gear, steerable nose wheel
14. Fuel selector on console between seats
15. LAMBERT ARROW FLASH 2 wing tip lights + fin beacon
16. Lambert Flaps V4_0 LED light +LINAK electric flaps actuator
17. Landing lights in both wings, WIG-WAG
18. Large square eye-ball vents 3275
19. Leather glareshield, middle size
20. LEMO Connector with power supply
21. Lockable canopy, Lockable fuel tank caps
22. Middle size instrument panel for G3X CARBON
23. Noise insulation on firewall
24. Nose gear doubled flexible rod (Teleflex)
25. RAMI AV-10 comm antenna, AV-74 transponder DME antenna
26. RAMI AV-525 VOR, LOC & GS "V" Dipole Antenna
27. Seats padded textile
28. SHILTEK LG fire sleeves on the oil hoses
29. Short control sticks for Tosten CS-6 grips
30. USB port(s) on the instrument panel
31. Wing lockers

Aircraft Operating Instructions

7.13 Instruments and Avionics

BRISTELL LSA, S/N 437/2019 is fitted with:

Flight instruments:

1. Back-up ASI Winter 7FMS 513 (0-160 kts)
2. Back-up ALT Winter 4 FGH 40, 0-1000-20000 ft, inHg
3. Winter QM 2 Art. 1120 bank indicator
4. Garmin G3X flight display system including:
5. Garmin GDU 465 display unit
6. Garmin GEA 24 Engine Interface Module
7. Garmin GA 26C GPS antenna for G3X
8. Garmin GA 57X combo GPS / XM antenna for G3X
9. Garmin GAP 26 angle of attack heated probe
10. Garmin GDL 51R Remote-mount SiriusXM® Receiver
11. Garmin GMU 22 Magnetometer
12. Garmin GPS 20A ADS-B Receiver
13. Garmin GSA 28 autopilot servos installation (roll+pitch)
14. Garmin GSU 25 ADHRS (1x)
15. Garmin GTP 59 Temperature Probe
16. TCW IBBS-12V-3AH backup battery for Garmin G3X

Engine instruments:

1. Garmin GEA 24 Engine Interface Module for Garmin G3X

COM/NAV and other instruments:

1. Garmin GTR 20 remote-mount com radio
2. Garmin GTX 45R mode S transponder with ADS-B out
3. ELT Kannad AF Integra 406 MHz + RC 200 control unit
4. GARMIN AERA 795 GPS + AirGizmos PD-22 bracket for Garmin 795 GPS
5. LED strip on glareshield + dimmer

NOTE

For operating instructions refer to the documentation supplied with the instruments.

Aircraft Operating Instructions

7.14 Cockpit

7.14.1 Cockpit layout


BRISTELL LSA, S/N 437/2019 has the following cockpit layout:



Aircraft Operating Instructions

7.14.2 Instrument panel

BRISTELL LSA, S/N 437/2019 has the following instrument panel:

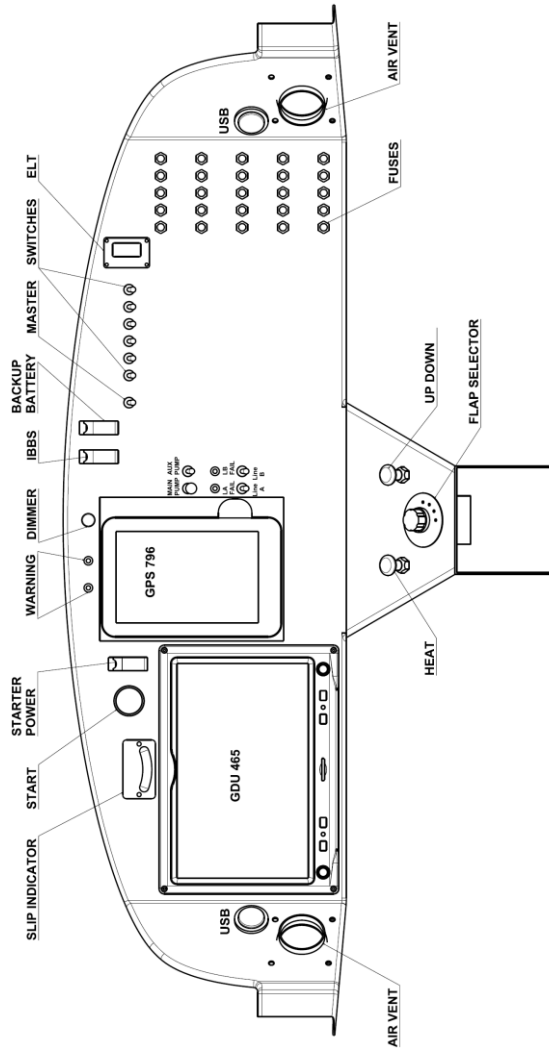

Aircraft Operating Instructions

SECTION 8

8 Airplane handling, servicing and maintenance

8.1 *Introduction*

8.2 *Aircraft inspection periods*

8.3 *Aircraft alterations or repairs*

8.4 *Ground handling*

8.4.1 Towing

8.4.2 Parking

8.4.3 Mooring

8.4.4 Jacking

8.4.5 Road transport

8.5 *Cleaning and care*

Aircraft Operating Instructions

8.1 Introduction

This section contains factory-recommended procedures for proper ground handling and servicing of the airplane. It also identifies certain inspection and maintenance requirements, which must be followed if the airplane is to retain that new-plane performance and dependability.

8.2 Aircraft inspection periods

Periods of overall checks and contingent maintenance depends on the condition of the operation and on overall condition of the airplane.

Inspections and revisions should be carried out in the following periods, at least:

- a) after the first 25 flight hours
- b) after every 50 flight hours
- c) after every 100 flight hours or at least annual inspection

Refer to the Engine Operator's Manual for engine maintenance.

Maintain the prop according to its manual.

All repairs and maintenance should be made in accordance with AC 43.13-1B.

8.3 Aircraft alterations or repairs

It is recommended to contact the airplane manufacturer prior to any alternations to the aircraft to ensure that the airworthiness of the aircraft is not violated. Always use only the original spare parts produced by the airplane (engine, prop) manufacturer.

If the aircraft weight is affected by that alternation, a new weighing is necessary, then record the new empty weight into the Weight and Balance record / Permitted payload range in SECTION 6 and up-date the placard showing weights in the cockpit.

8.4 Ground handling

8.4.1 Towing

To handle the airplane on the ground, use the Tow Bar, or the fuselage rear pushed down in the place of a bulkhead.

CAUTION

Avoid excessive pressure at the airplane airframe-especially at control surfaces. Keep all safety precautions, especially in the propeller area.

Aircraft Operating Instructions

8.4.2 Parking

It is advisable to park the airplane inside a hangar or alternatively inside any other suitable space (garage) with stable temperature, good ventilation, low humidity and dust-free environment.

It is necessary to moor the airplane when it is parked outside a hangar. Also when parking for a long time, cover the cockpit canopy, possibly the whole airplane by means of a suitable tarpaulin.

8.4.3 Mooring

The airplane should be moored when parked outside a hangar after the flight day. The mooring is necessary to protect the airplane against possible damage caused by wind and gusts.

For this reason the aircraft is equipped with mooring eyes located on the lower surfaces of the wings.

Mooring procedure:

1. Check: Fuel Selector shut off, Circuit breakers and Master switch switched off, Switch box switched off.
2. Fix the hand control using e.g. safety harness
3. Close air vent
4. Close and lock canopy
5. Moor the aircraft to the ground by means of a mooring rope passed through the mooring eyes located on the lower surfaces of the wings and below rear fuselage

NOTE

In the case of long term parking, especially during winter, it is recommended to cover the cockpit canopy or possibly the whole aircraft by means of a suitable tarpaulin attached to the airframe.

8.4.4 Jacking

Since the empty weight of this aircraft is relatively low, two people can lift the aircraft easily.

First of all prepare two suitable supports to support the aircraft.

It is possible to lift the aircraft by handling the following parts:

- By pushing the fuselage rear section down in the place of a bulkhead the fuselage front section may be raised and then supported under the firewall.

Aircraft Operating Instructions

- By holding the fuselage rear section under a bulkhead the fuselage rear may be raised and then supported under that bulkhead.
- To lift up a wing, push from underneath that wing only at the main spar area. Do not lift up a wing by handling the wing tip.

8.4.5 Road transport

The aircraft may be transported after loading on a suitable car trailer. It is necessary to dismantle the wings before road transport. The aircraft and dismantled wings should be attached securely to protect these parts against possible damage.

8.5 Cleaning and care

Use efficient cleaning detergents to clean the aircraft surface. Oil spots on the aircraft surface (except the canopy!) may be cleaned with gasoline. The canopy may only be cleaned by washing it with a sufficient quantity of lukewarm water and an adequate quantity of detergents. Use either a soft, clean cloth sponge or deerskin. Then use suitable polishers to clean the canopy.

CAUTION

Never clean the canopy under “dry“conditions and never use gas or chemical solvents!

Upholstery and covers may be removed from the cockpit, brushed and eventually washed in lukewarm water with an adequate quantity of detergents. Dry the upholstery thoroughly before insertion into the cockpit.

CAUTION

In the case of long term parking, cover the canopy to protect the cockpit interior from direct sunshine.

Aircraft Operating Instructions

SECTION 9

9 REQUIRED PLACARDS AND MARKINGS

9.1 *Limitation placards*

9.2 *Miscellaneous placards and markings*

Aircraft Operating Instructions

9.1 Limitation placards

The airplane must be placarded with:

- All fuses
- Ignition switches (LANE A,B)
- Starter
- Trim: Nose heavy and Tail heavy
- Flaps: 0°, 10°, 20°, 30°
- Maximum rear baggage weight 15 kg, 33 lb
- Maximum weight in each wing locker 20 kg, 44 lb, if installed
- Instruments
- Canopy: Open - Close
- Fuel capacity: 60 litres, 15.87 US gallons / min. 95 Octane - at filler neck
- Fireproof Identification plate attached to the fuselage port side, in front of the horizontal tail unit

Aircraft Operating Instructions

PASSENGER WARNING! THIS AIRCRAFT WAS MANUFACTURED IN ACCORDANCE WITH LIGHT SPORT AIRCRAFT AIRWORTHINESS STANDARDS AND DOES NOT CONFORM TO STANDARD CATEGORY AIRWORTHINESS REQUIREMENTS.	Passenger warning for LSA category aeroplanes. Located on the instrument panel.
PASSENGER NOTICE THIS AIRCRAFT CONFORMS TO ASTM CONSENSUS STANDARDS OF AIRWORTHINESS DEVELOPED AND MAINTAINED BY THE AVIATION COMMUNITY UNDER ASTM TECHNICAL COMMITTEE F37.	Passenger notice for LSA category aeroplanes. Located on the instrument panel.
ALL AEROBATIC MANEUVERS, INCLUDING SPINS ARE PROHIBITED	Operation limitation. Located on the instrument panel.
WARNING IFR FLIGHTS AND INTENTIONAL FLIGHTS UNDER ICING CONDITIONS ARE PROHIBITED!	Operation limitation. Located on the instrument panel.
BAGGAGE COMPARTMENT - A	Main baggage compartment behind the seats.
BAGGAGE COMPARTMENT - B	Additional baggage compartment behind the Baggage compartment A. NOT TO BE USED FOR HEAVY ITEMS!
MAX. 33 LB	Maximum weight of baggage in the Baggage compartment – A, behind the seats.
MAX. 44 LB	Maximum weight of baggage in each wing locker, if installed.
MAX. 22 LB	Maximum weight of baggage in fuselage front locker, if installed.
UNUSABLE FUEL QUANTITY 0.13 US GAL	Unusable quantity of fuel in each tank
V_{FE} 75 kt V_A 96 kt V_{NE} 157 kt	Airspeed limitations. Located on the instrument panel or fuselage side.
ENGINE RPM: Max. take-off (max. 5 min.) 5800 rpm Max. continuous 5500 rpm Idle 1400 rpm	Engine speed limitations. Located on the instrument panel or fuselage side.









Aircraft Operating Instructions

WARNING
DO NOT EXCEED MAXIMUM
TAKE-OFF WEIGHT 1320 LBS

Maximum Takeoff Weight Limitation.
1320 lb limit for Light sport
aeroplanes.
Located on the instrument panel or
fuselage side.

Aircraft Operating Instructions

9.2 Miscellaneous placards and markings

	Wing flap root area
	Areas to avoid pushing on them. Wing trailing edge, control surfaces trailing edges, etc.
	Located on wing upper skin around the fuel tank filler neck.
	Throttle and Choke placard located on the Throttle-choke quadrant.
	Located on the fuselage right/left side under the instrument panel. Placard point to the lever to adjust pedals position.
	Located between the seat backs, at the headphone sockets.
	Located on the fuselage left side at the button to release canopy locks.
	Located inside the cockpit on the left and right side of the tip-up canopy frame.

Aircraft Operating Instructions

 <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>This aircraft is equipped with a ballistically-deployed emergency parachute system</p> </div>	<p>If BRS rescue system is installed:</p> <p>Placard located on the both sides of fuselage between canopy and rear window</p>
 <div style="border: 1px solid black; padding: 10px; margin-top: 10px;"> <p style="text-align: center;">Rocket Deployed Parachute Egress Area</p> <p style="text-align: center;">STAY CLEAR</p> <p style="text-align: center; font-size: small;">Emergency information at: www.BRSparachutes.com or call (651) 457-7491 — after hours & weekends call (763) 226-6110</p> </div>	<p>Placard located in place rocket egress</p>

CAUTION

The owner (operator) of this airplane is responsible for the readability of placards during the aircraft service life.

Aircraft Operating Instructions

SECTION 10

10 SUPPLEMENTS

10.1 Introduction

10.2 List of inserted supplements

10.3 Inserted Supplements

Aircraft Operating Instructions

10.1 Introduction

This section contains the appropriate supplements necessary to safely and efficiently operate the aircraft when equipped with various optional systems and equipment not provided with the standard airplane.

Aircraft Operating Instructions

10.2 List of inserted supplements

Date	Suppl. No.	Title of inserted supplement
07/2011	01	Aircraft Flight Training Supplement
07/2019	02	Description of the aircraft S/N 437/2019

Aircraft Operating Instructions

10.3 Inserted Supplements

Aircraft Operating Instructions

SUPPLEMENT No. 01

Aircraft Flight Training Supplement

The BRISTELL LSA flying characteristics and behavior are similar to single engine aircraft.

Following training procedure is applicable if the pilot is holder of UL, PPL or LSA Pilot License. The training flight hours are recommended minimum and depends on the Flight Instructor if student pilot is ready to continue on in next training step. Training can be performed by Flight Instructor or by the experienced pilot who has minimum 20 hours on the BRISTELL LSA.

Type Rating Training Procedure:

Ground Training - *before practical Flight Training the pilot has to get familiar with following procedures and documentation*

- *Aircraft Operating Instructions (AOI)*
- *Aircraft Maintenance and Inspection Procedures*
- *Aircraft preflight inspection procedure*
- *Control Checklists*
- *Radio, avionics, aircraft and engine controls procedures*
- *Differences in control and aircraft handling*
- *Emergency procedures*

Aircraft Operating Instructions

Flight training program - *recommended*

<i>Flight Training Procedure</i>		<i>Dual</i>		<i>Solo</i>	
		<i>Flights</i>	<i>hr/min</i>	<i>Flights</i>	<i>hr/min</i>
1.	<i>Check flight</i>	1	30'		
2.	<i>Pattern training flights up to 1000 ft AGL</i>	4	20'	3	15'
3.	<i>Pattern training flights up to 500 ft AGL</i>	4	20'	3	15'
4.	<i>Stall speed, 45°turns, side slips</i>	1	30'	1	20'
5.	<i>Emergency landing training</i>	4	20'	3	10'
Total		14	2 hr	10	1 hr

Aircraft Operating Instructions

Flight Training Procedure - description

- 1. Check flight** – Student Pilot will fly the airplane in local flight, instructor is giving advice as necessary.
- 2. Pattern training flights up to 1000 feet AGL** - high pattern procedures, instructor is giving advice as necessary.
- 3. Pattern training flights up to 500 feet AGL** - high pattern procedures, instructor is giving advice as necessary.
- 4. Stall speed, 45°turns, sideslips** – stall speed flaps retracted and extended (landing configuration), sideslips at landing configuration.
- 5. Emergency landing training** – emergency procedures and landing to 1/3 of runway.

NOTE

During solo flights instructor is observing the student pilot on pattern and can advise by radio as necessary.

Endorsement:

Instructor will endorse the Type Rating to the Pilots Logbook, if required.

Aircraft Operating Instructions

SUPPLEMENT No. 02

AIRCRAFT DESCRIPTION

Registration: **N437BL**

Serial Number: **437/2019**

This Supplement must be contained in the Aircraft Operating Instructions during operation of the airplane.

Information contained in this Supplement add or replace information from the basic Aircraft Operating Instructions in the further mentioned parts only. Limitations, procedures and information not mentioned in this Supplement are contained in the basic Aircraft Operating Instructions.

Aircraft Operating Instructions

0 TECHNICAL INFORMATION

This Supplement adds information necessary for airplane operation with equipment installed in the airplane **BRISTELL LSA, S/N 437/2019**.

0.1 Record of revisions

No changes.

1 GENERAL INFORMATION

No changes.

2 OPERATING LIMITATION

2.4.3 Oil

Type of oil used by aircraft manufacturer :
Aeroshell OIL SPORT PLUS 4

2.4.4 Coolant

Type of used coolant:
Castrol Radicool NF
Mixture ratio coolant / water 1:1.5 litres (40%) (-25 °C)
Max. Coolant temperature : 120 °C (248 °F)

3 EMERGENCY PROCEDURES

No changes.

4 NORMAL PROCEDURES

No changes.

5 PERFORMANCE

No changes.

Aircraft Operating Instructions

6 WEIGHT AND BALANCE

No changes.

7 AIRPLANE AND SYSTEMS DESCRIPTION

No changes.

8 AIRPLANE HANDLING, SERVICING AND MAINTENANCE

No changes.

9 REQUIRED PLACARDS AND MARKINGS

No changes.